


REAR NO. 1 SEAT ASSEMBLY (for RH Side)

COMPONENTS

w/o Rear No. 2 Seat

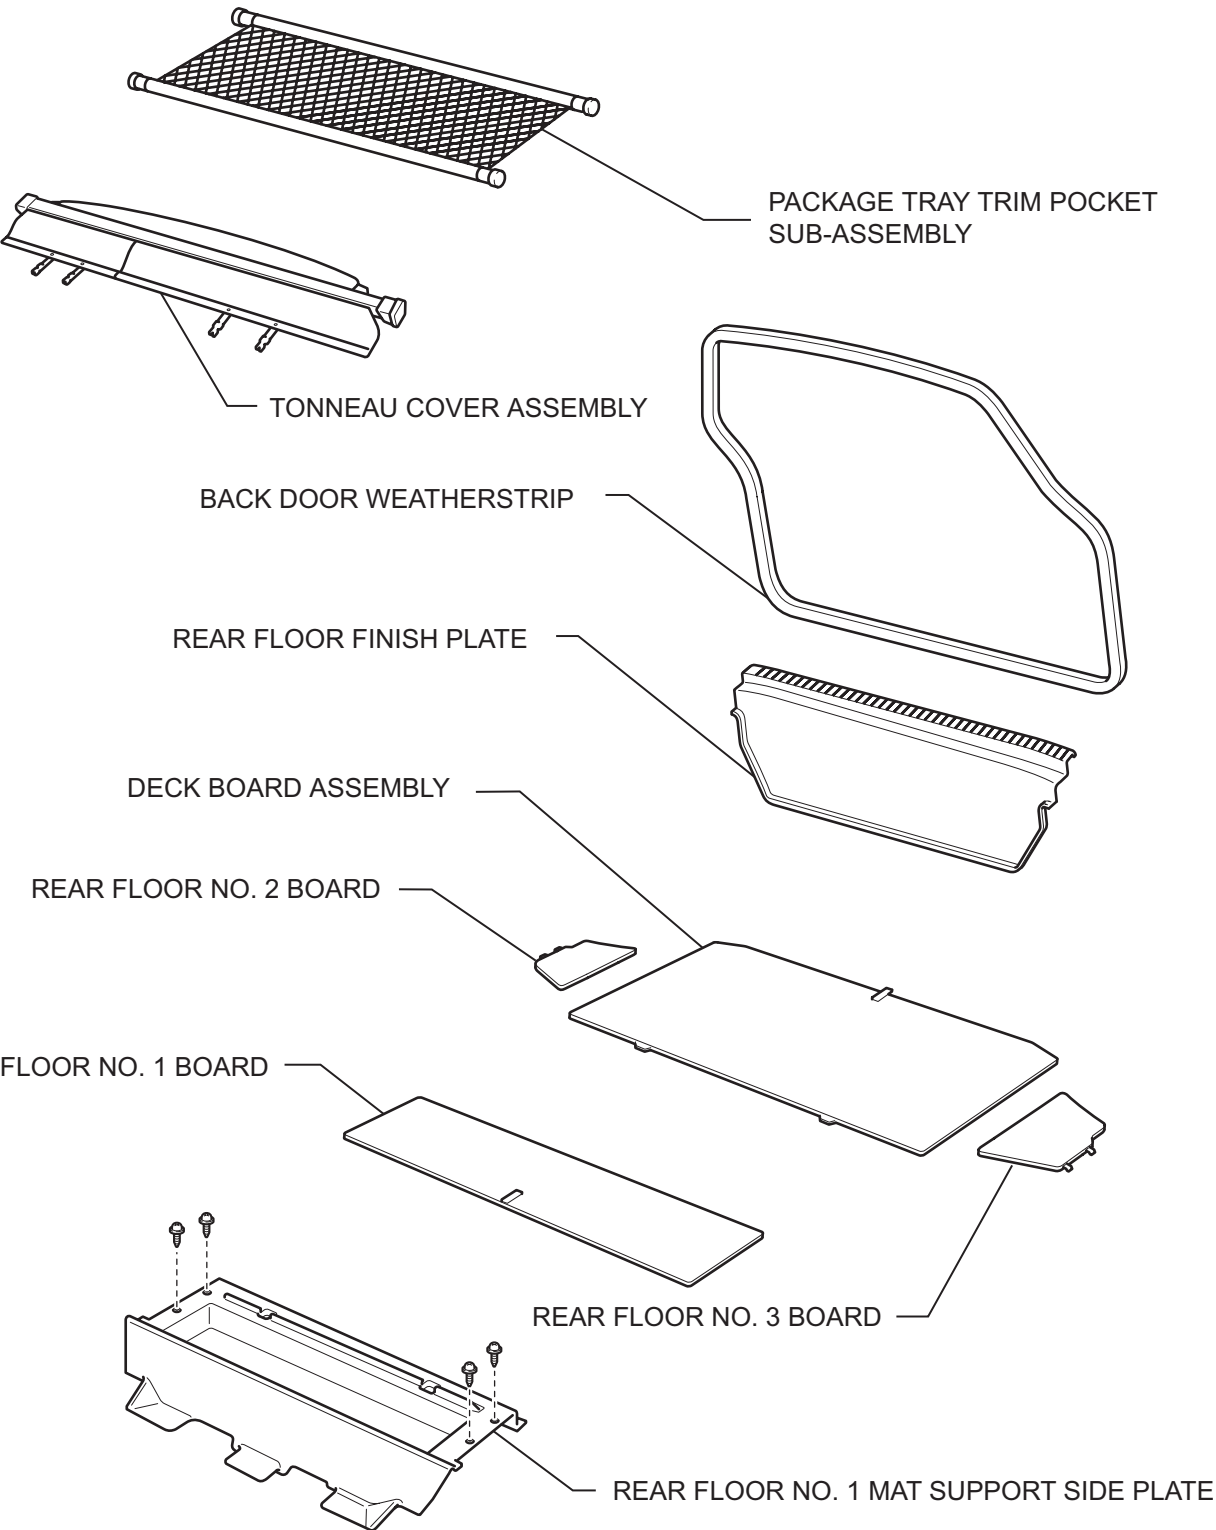

w/o Rear No. 2 Seat

RECLINING REMOTE CONTROL LEVER
SUB-ASSEMBLY RH

18 (184, 13)

REAR NO. 1 SEAT LOCK CABLE ASSEMBLY

REAR SHOULDER BELT HANGER

REAR NO. 1 SEAT OUTER BELT
ASSEMBLY RHRECLINING REMOTE CONTROL
LEVER BEZEL RH

ANCHOR COVER

42 (428, 31)

DECK TRIM SIDE PANEL ASSEMBLY RH

SIDE WINDOW
GARNISH HOOK


ROPE HOOK

N*m (kgf*cm, ft.*lbf) : Specified torque


TETHER ANCHOR BRACKET SUB-ASSEMBLY

T

SE

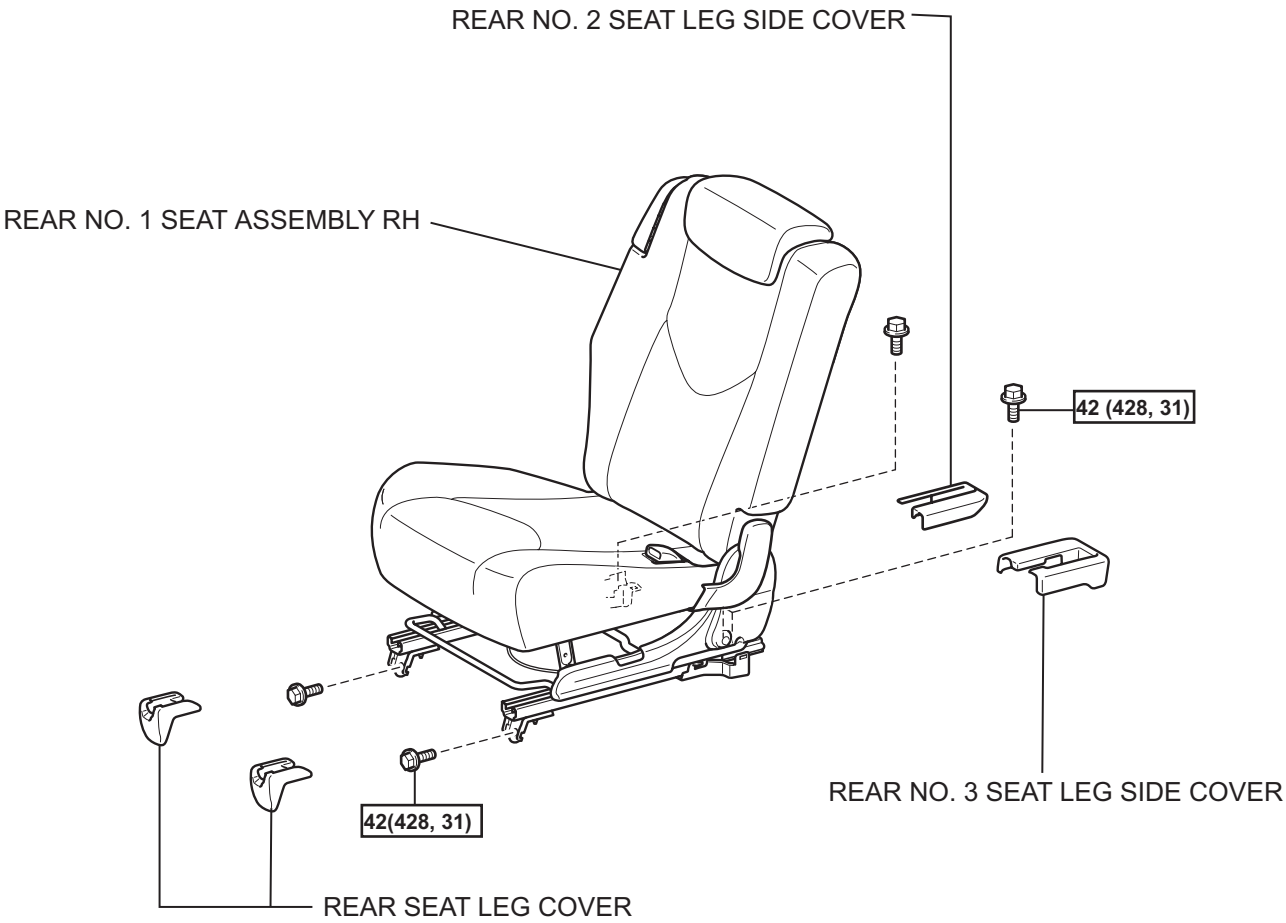

N*m (kgf*cm, ft.*lbf) : Specified torque

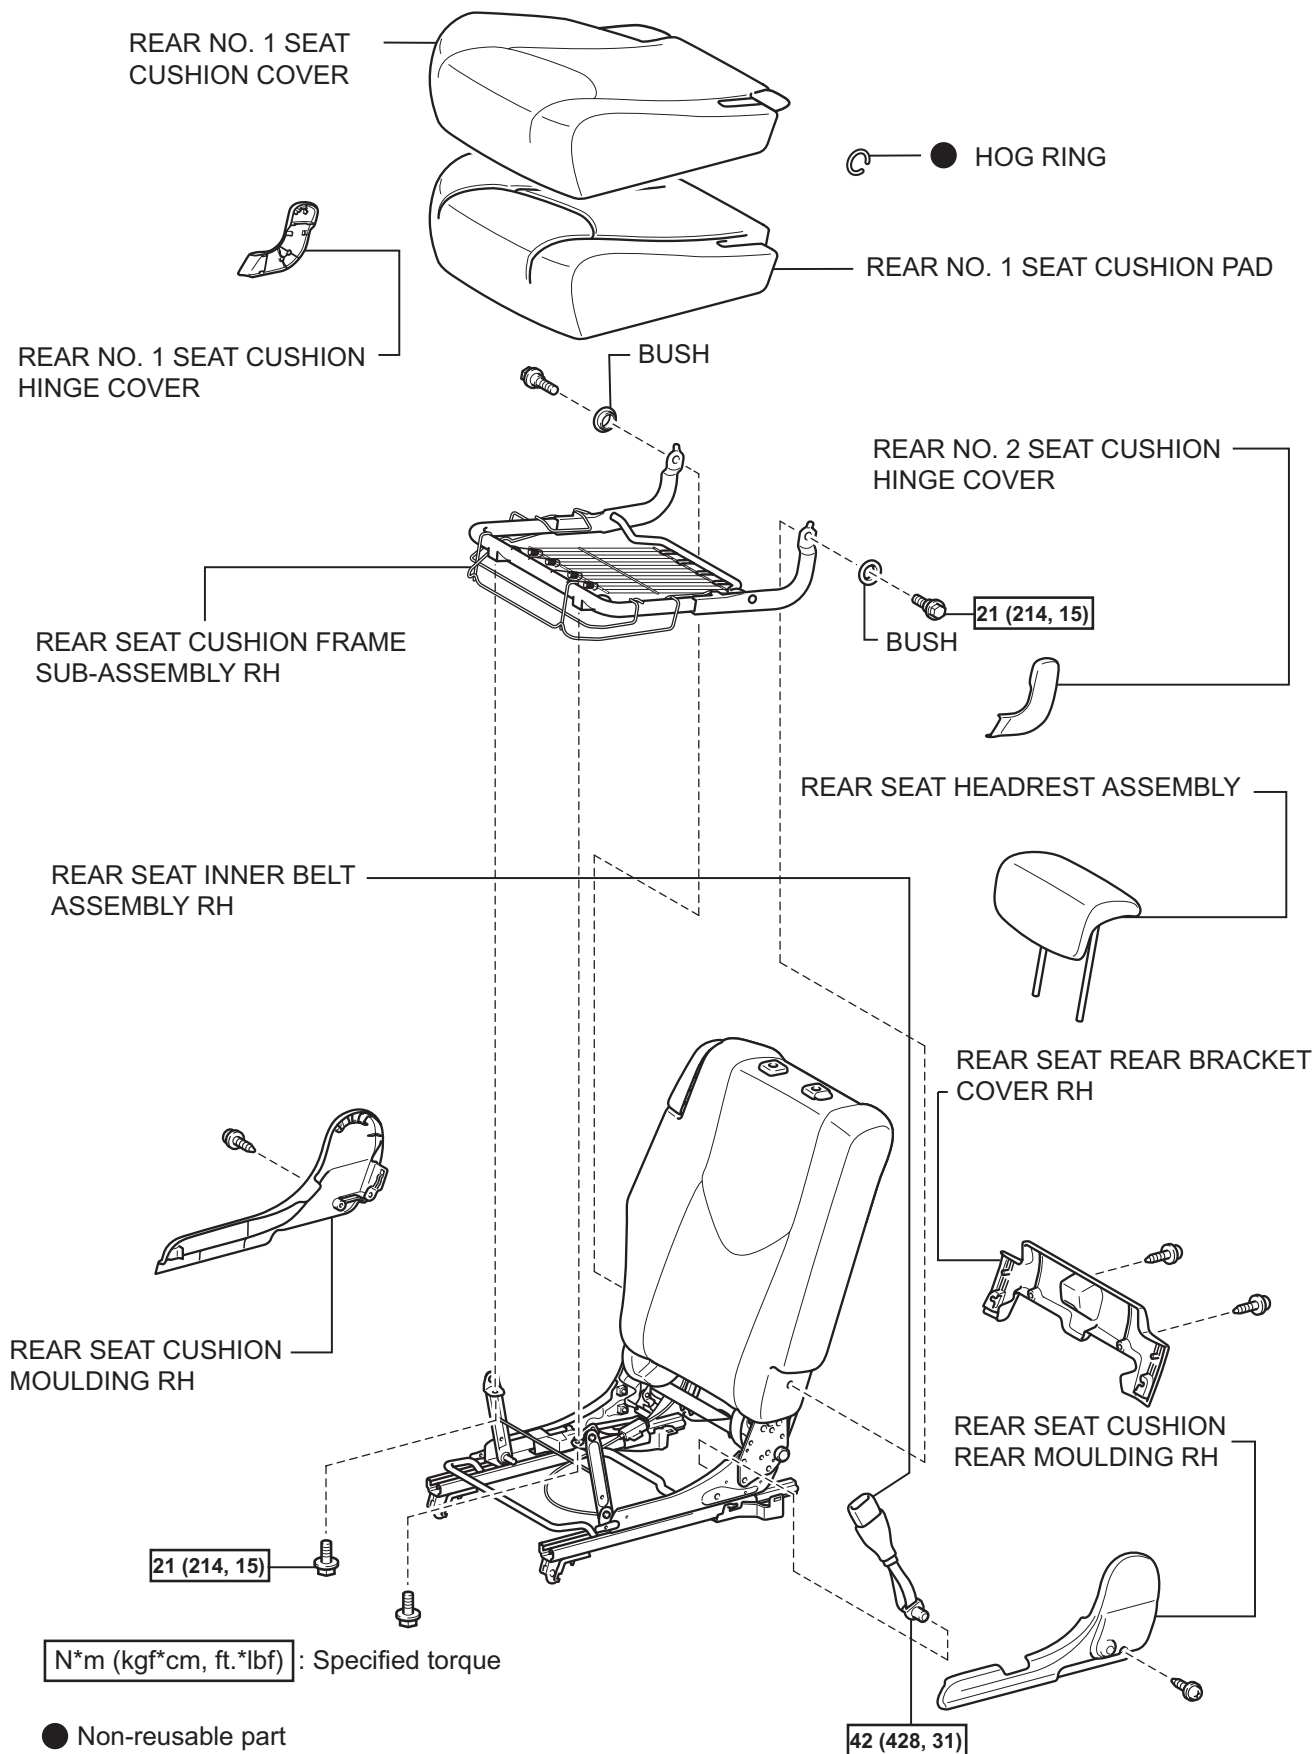

w/o Rear No. 2 Seat

REAR SEAT RECLINING
RELEASE LEVERREAR SEAT HEADREST
SUPPORTREAR SEATBACK LOCK
CONTROL LEVER BASE RH

REAR NO. 1 SEATBACK PAD

REAR NO. 1 SEATBACK COVER

C ● HOG RING

REAR SEAT COVER

REAR SEATBACK FRAME
SUB-ASSEMBLY RH

REAR SEATBACK PROTECTOR



REAR SEATBACK COVER RH

REAR SEAT RECLINING
ADJUSTER ASSEMBLY RH

N*m (kgf*cm, ft.*lbf) : Specified torque

● Non-reusable part



w/ Rear No. 2 Seat

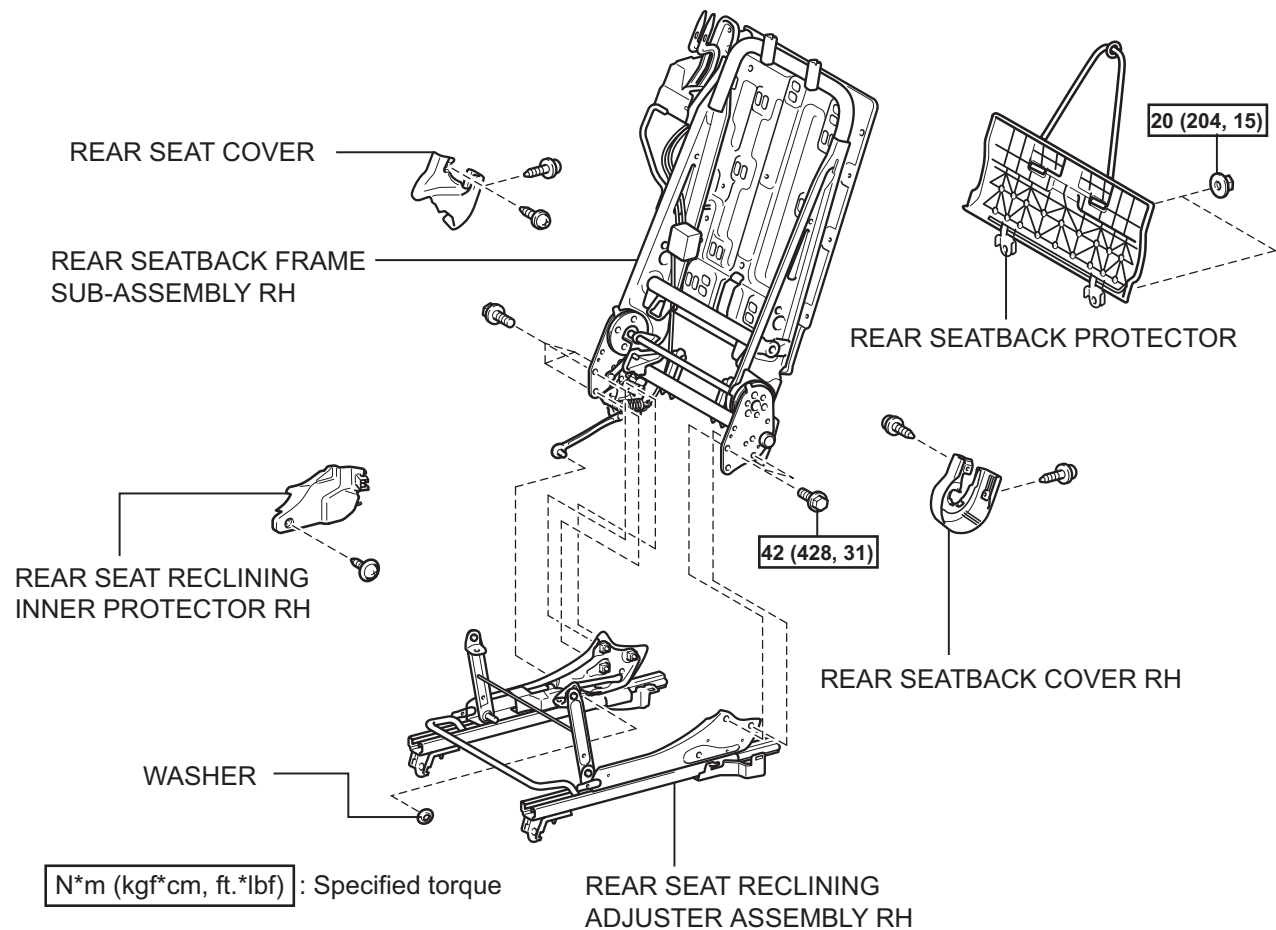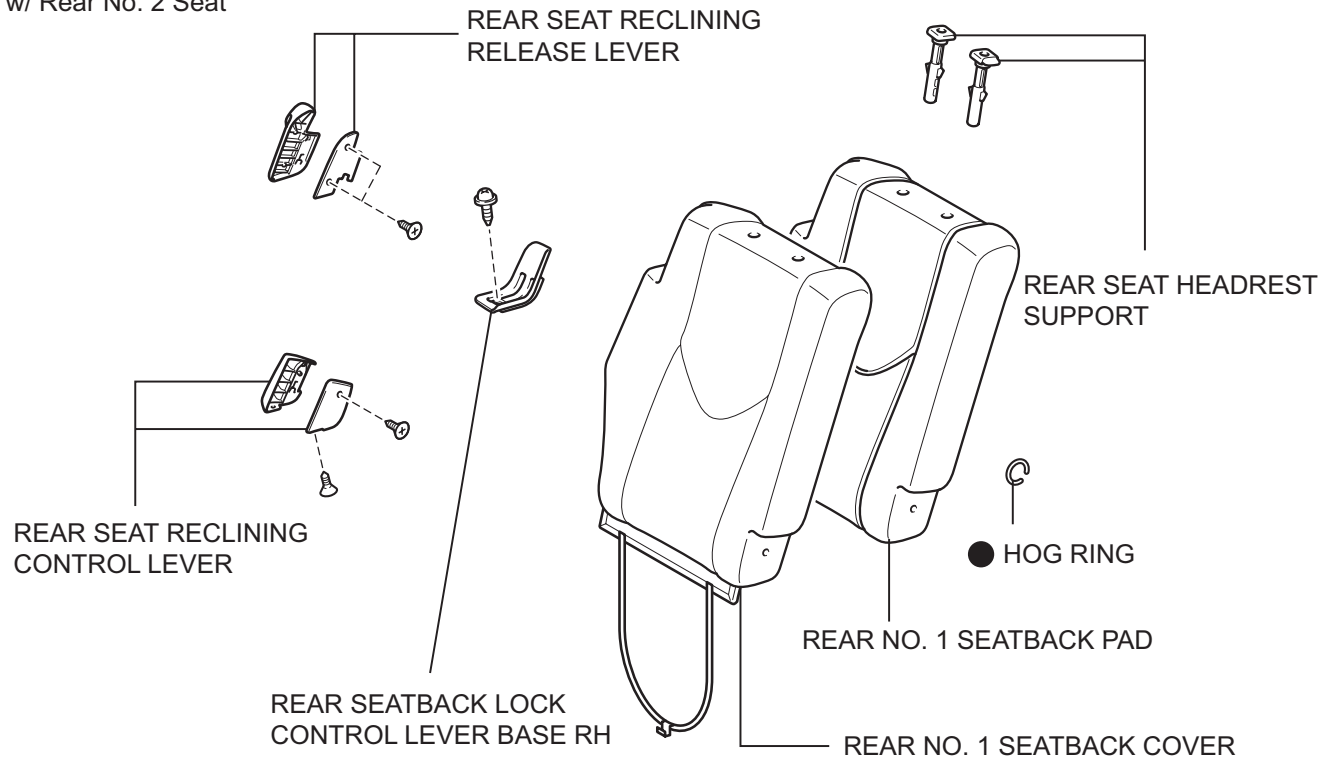


REMOVAL

1. REMOVE PACKAGE TRAY TRIM POCKET SUB-ASSEMBLY (w/o Rear No. 2 Seat)
2. REMOVE TONNEAU COVER ASSEMBLY (w/o Rear No. 2 Seat)
3. REMOVE REAR FLOOR NO. 1 BOARD (w/o Rear No. 2 Seat)
4. REMOVE DECK BOARD ASSEMBLY (w/o Rear No. 2 Seat)
5. REMOVE REAR FLOOR NO. 3 BOARD (w/o Rear No. 2 Seat)
6. REMOVE REAR FLOOR NO. 2 BOARD (w/o Rear No. 2 Seat)
7. REMOVE REAR FLOOR NO. 1 MAT SUPPORT SIDE PLATE (w/o Rear No. 2 Seat) (See page [IR-31](#))
8. REMOVE BACK DOOR WEATHERSTRIP (w/o Rear No. 2 Seat)
9. REMOVE REAR FLOOR FINISH PLATE (w/o Rear No. 2 Seat) (See page [IR-31](#))
10. REMOVE RECLINING REMOTE CONTROL LEVER BEZEL RH (w/o Rear No. 2 Seat)
 - (a) Using a screwdriver, detach the 6 claws and remove the bezel.

HINT:
Tape the screwdriver tip before use.
11. REMOVE TETHER ANCHOR BRACKET SUB-ASSEMBLY (w/o Rear No. 2 Seat) (See page [IR-32](#))
12. REMOVE DECK TRIM SIDE PANEL ASSEMBLY RH (w/o Rear No. 2 Seat) (See page [IR-33](#))

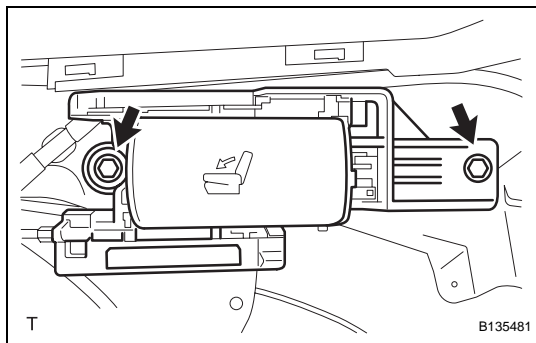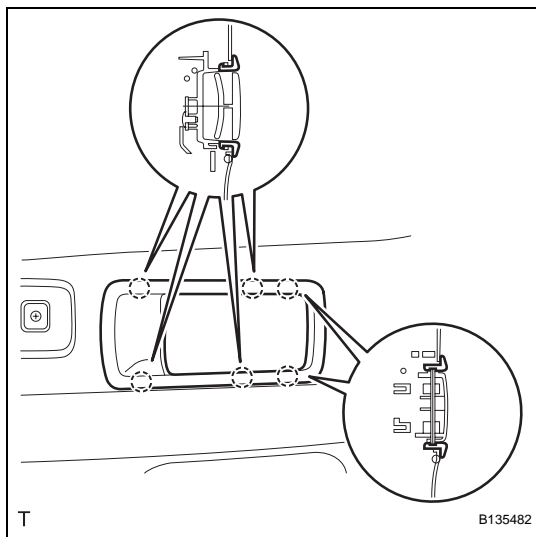

13. REMOVE RECLINING REMOTE CONTROL LEVER SUB-ASSEMBLY RH (w/o Rear No. 2 Seat)
 - (a) Remove the 2 bolts and lever.
 - (b) Disconnect the rear No. 1 seat lock cable from the lever.

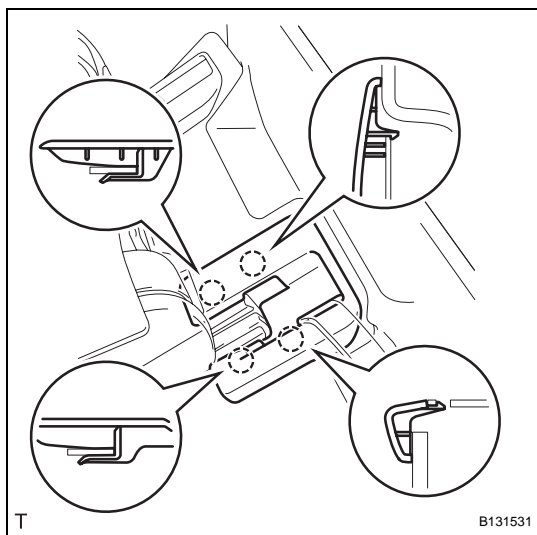
**14. REMOVE REAR NO. 3 SEAT LEG SIDE COVER (w/ Rear No. 2 Seat)**

- (a) Using a screwdriver, detach the 4 claws and remove the side cover.

HINT:

Tape the screwdriver tip before use.


SE

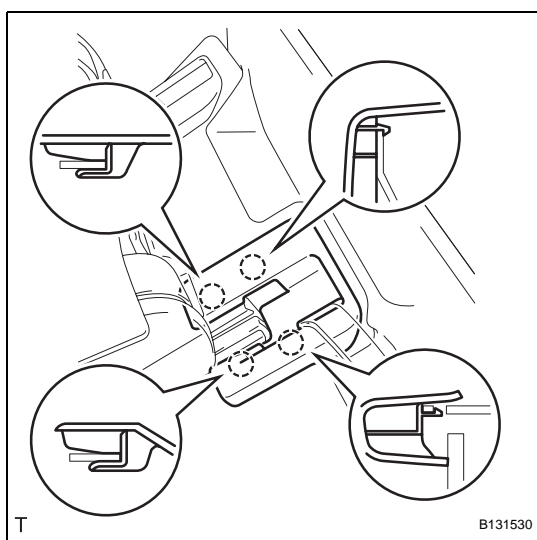**15. REMOVE REAR NO. 3 SEAT LEG SIDE COVER (w/o Rear No. 2 Seat)**

- (a) Using a screwdriver, detach the 4 claws and remove the side cover.

HINT:


Tape the screwdriver tip before use.

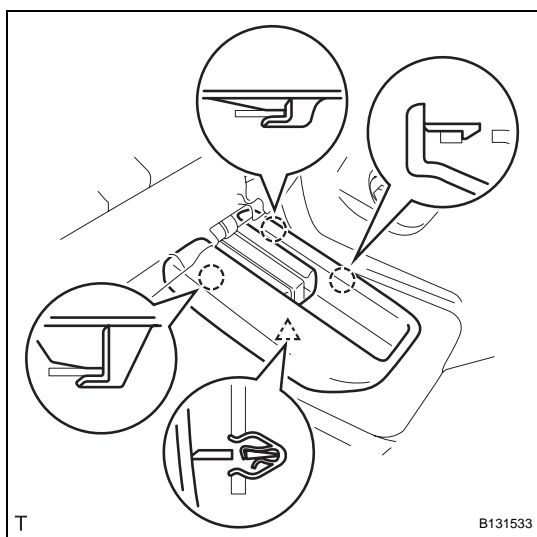**16. REMOVE REAR NO. 2 SEAT LEG SIDE COVER**

- (a) Using a screwdriver, detach the 3 claws and clip, and remove the side cover.

HINT:

Tape the screwdriver tip before use.

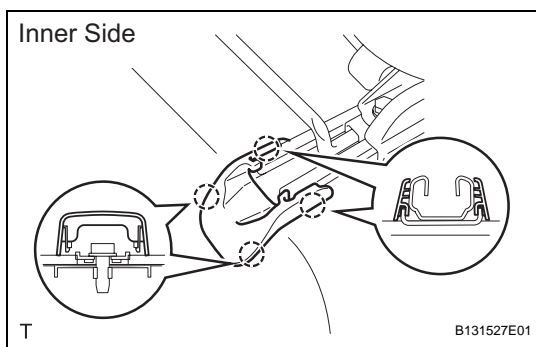**17. REMOVE REAR SEAT LEG COVER**


- (a) Using a screwdriver, detach the 8 claws and remove the 2 leg covers.


HINT:

Tape the screwdriver tip before use.


18. REMOVE REAR NO. 1 SEAT LOCK CABLE ASSEMBLY (w/o Rear No. 2 Seat)

- (a) Disconnect the lock cable from the seat.
(1) Raise the adjuster's lock piece to release the lock.

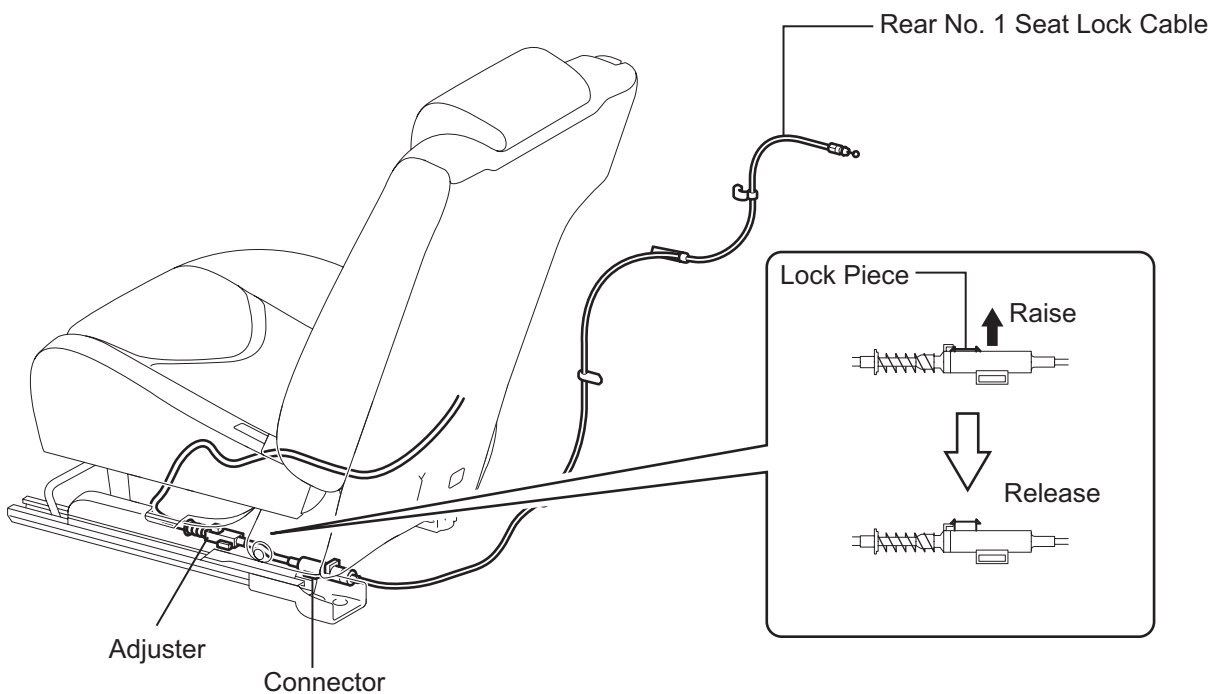


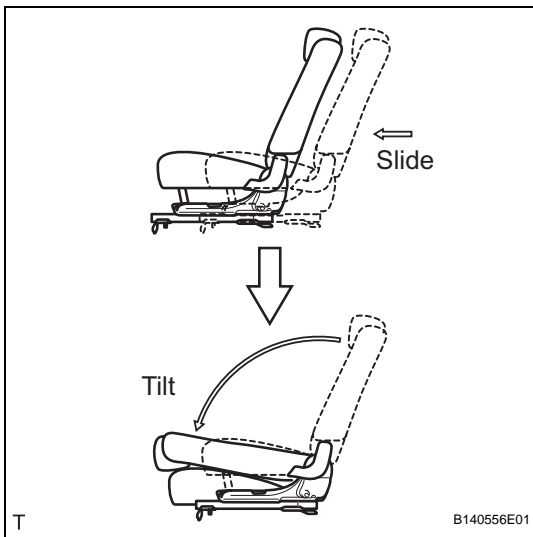


- (2) Slide the seat forward and tilt the seatback forward.

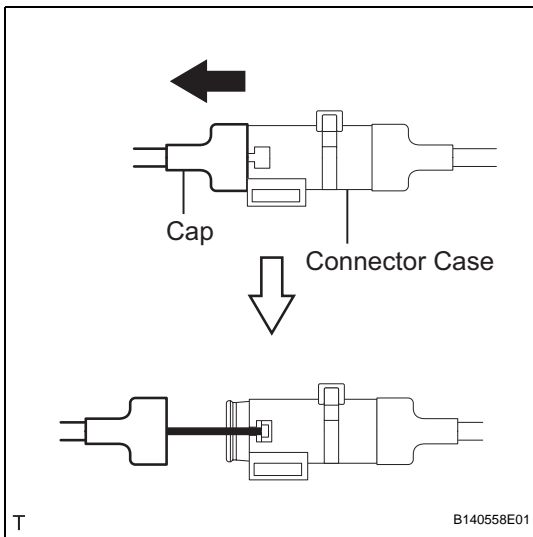


- (3) Remove the seat's cap from the connector case.

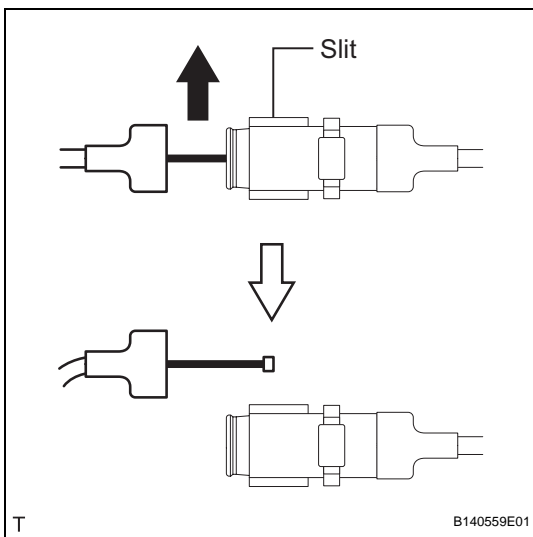

- (4) Pull the seat's cap toward the outside of the vehicle. Then remove the cable from the connector case's slit.

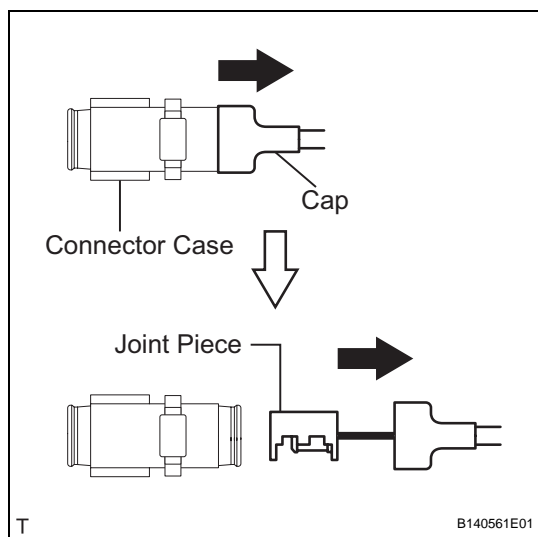


- (5) Remove the body's cap from the connector case.
- (b) Detach the clamps and remove the lock cable.

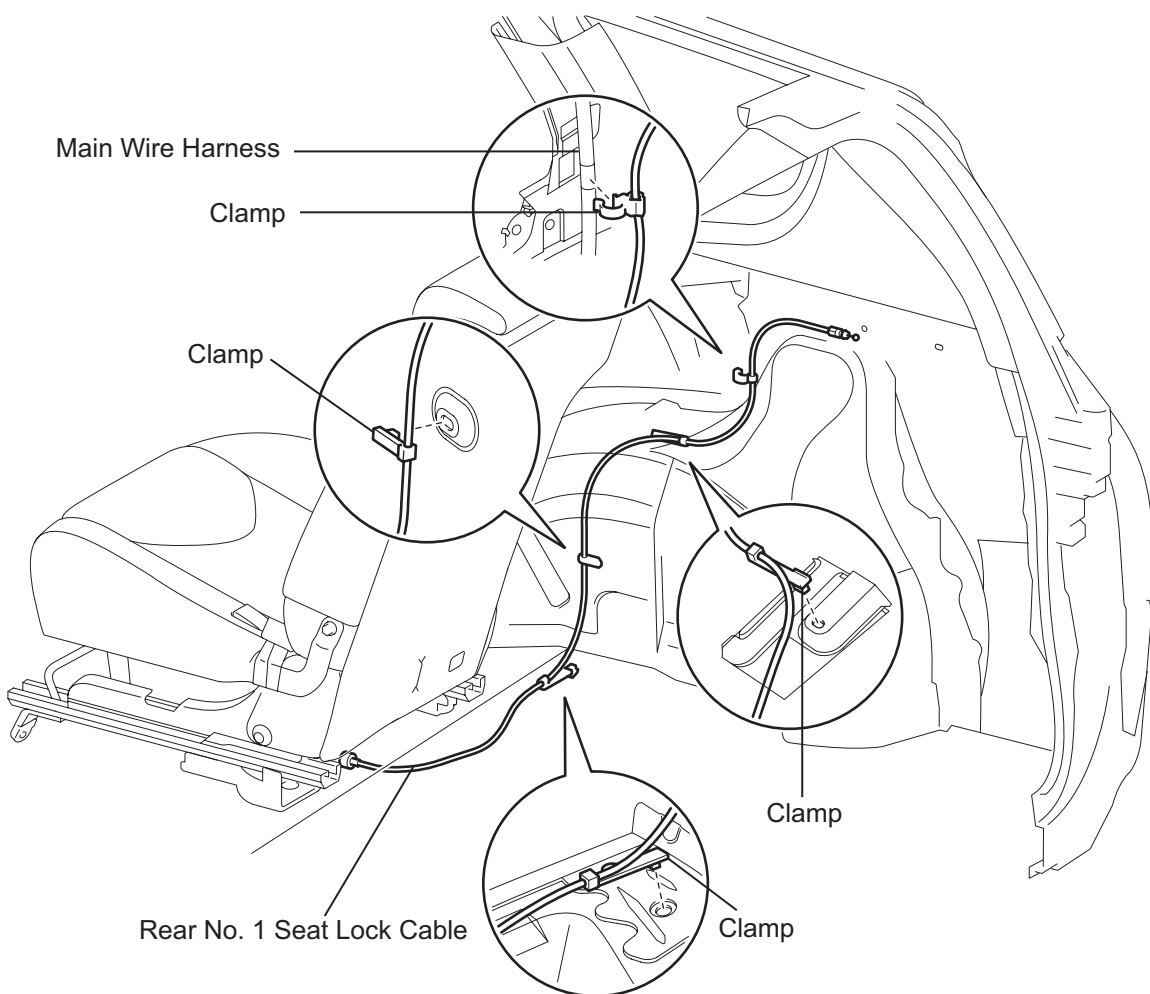


19. REMOVE REAR NO. 1 SEAT ASSEMBLY RH

- (a) Lift up the seat track adjusting handle and move the seat to the rearmost position.

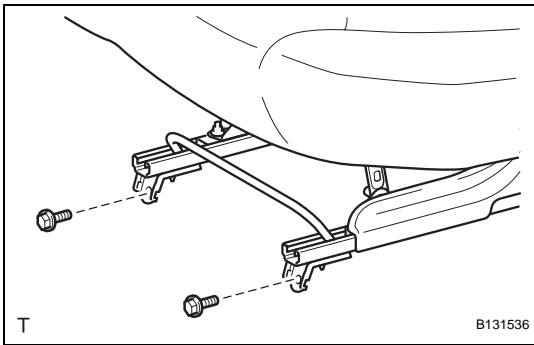

- (b) Remove the 2 bolts on the front side of the seat.
- (c) Lift up the seat track adjusting handle and move the seat to the foremost position.

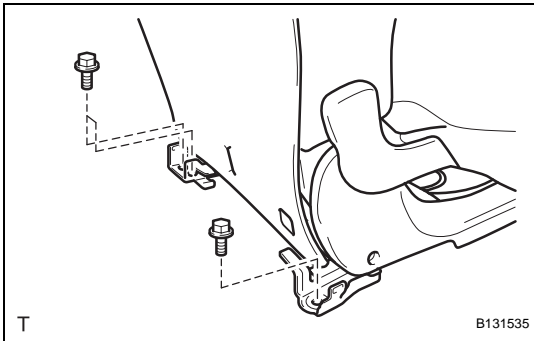

- (d) Remove the 3 bolts on the rear side of the seat.
- (e) Lift up the seat track adjusting handle and move the seat to the center position. Then remove the seat.

NOTICE:

Be careful not to damage the vehicle body,

SE

DISASSEMBLY

CAUTION:

Wear protective gloves. Sharp areas on the seatback frame, seat cushion frame and reclining adjuster may injure your hands.

1. REMOVE REAR SEAT HEADREST ASSEMBLY

2. REMOVE REAR NO. 2 SEAT CUSHION HINGE COVER

- Return the seatback to the upright position.
- Using a screwdriver, detach the 5 claws and remove the hinge cover.

HINT:

Tape the screwdriver tip before use.

3. REMOVE REAR NO. 1 SEAT CUSHION HINGE COVER

HINT:




Use the same procedures described for the rear No. 2 seat cushion hinge cover.


4. REMOVE REAR SEAT INNER BELT ASSEMBLY RH (See page [SB-40](#))

5. REMOVE REAR NO. 1 SEAT CUSHION ASSEMBLY RH

- Disconnect the rubber band of the seatback cover from the seat cushion frame.
- Remove the 2 bolts.


- Remove the 2 bolts, 2 bushes and cushion.

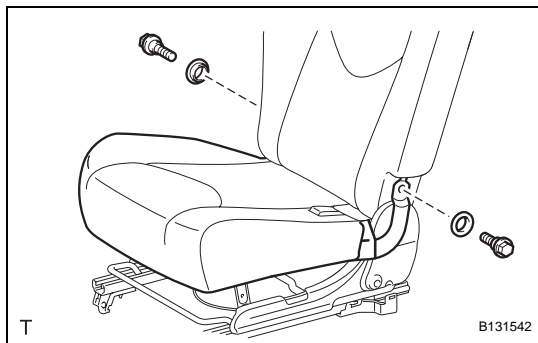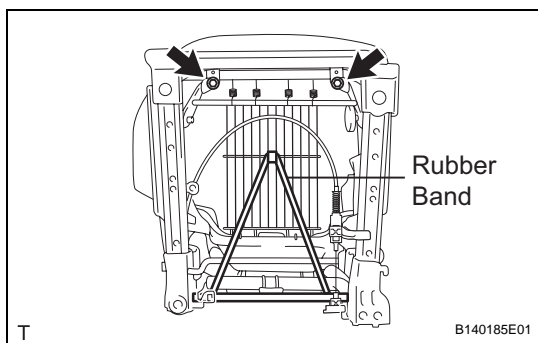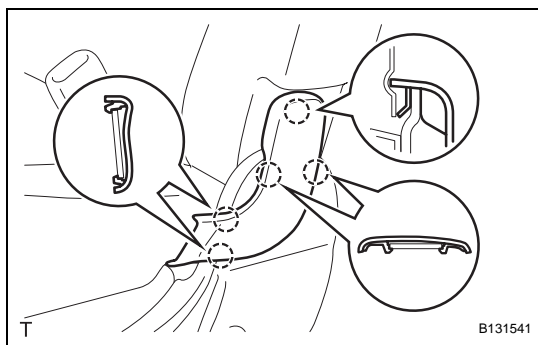

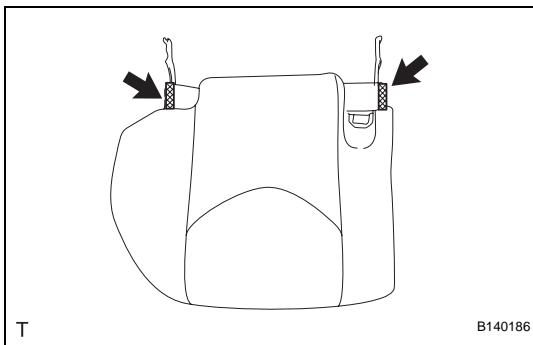


6. REMOVE REAR NO. 1 SEAT CUSHION COVER


(a) Detach the 2 hooks.

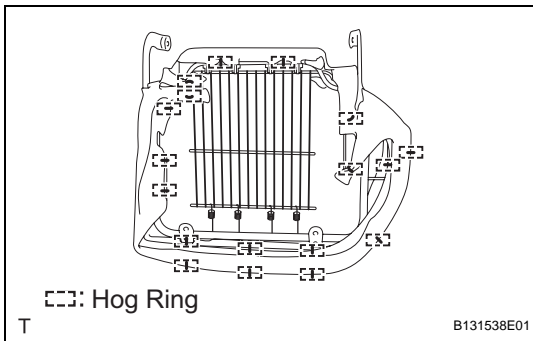

(b) Remove the 18 hog rings and seat cushion cover (with pad) from the seat cushion frame.

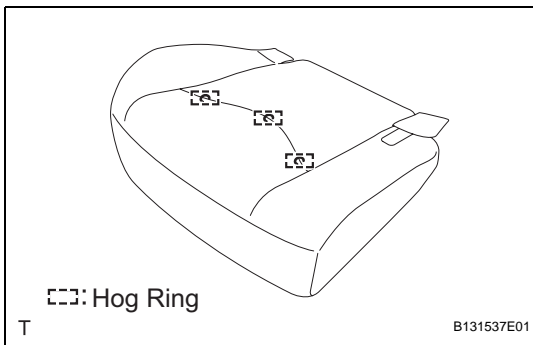

(c) Remove the 3 hog rings and seat cushion cover from the seat cushion pad.

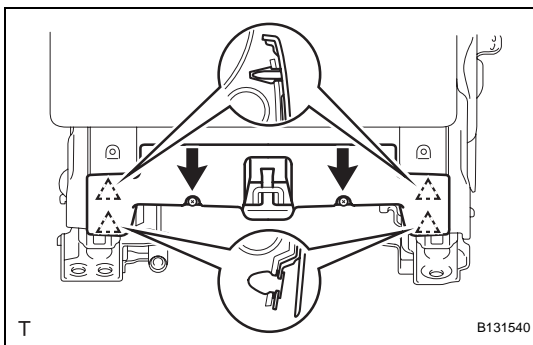


7. REMOVE REAR SEAT REAR BRACKET COVER RH

(a) Open the lower part of the seatback cover. Then remove the 2 screws.

(b) Using a screwdriver, detach the 4 clips and remove the bracket cover.

HINT:

Tape the screwdriver tip before use.

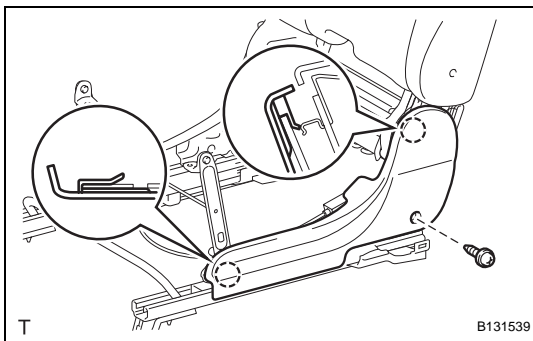

8. REMOVE REAR SEAT CUSHION REAR MOULDING RH

(a) Remove the screw.


(b) Detach the 2 claws and remove the moulding.

9. REMOVE REAR SEAT CUSHION MOULDING RH

HINT:


Use the same procedures described for the rear seat cushion rear moulding RH.

SE

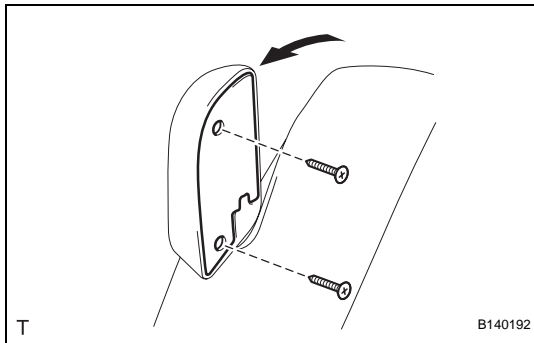

10. REMOVE REAR SEAT RECLINING RELEASE LEVER (w/o Rear No. 2 Seat)


- (a) Pull the reclining control lever to reveal the 2 screws. Then remove the 2 screw and cover.

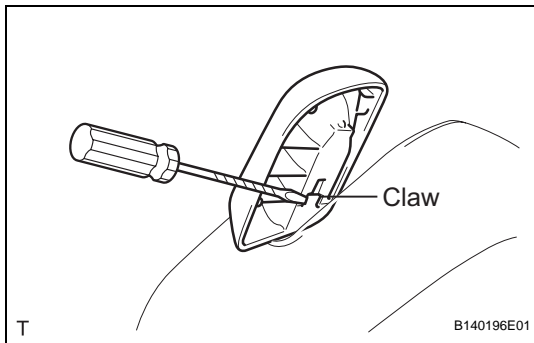

- (b) Using a screwdriver, detach the claw and remove the release lever.


HINT:

Tape the screwdriver tip before use.

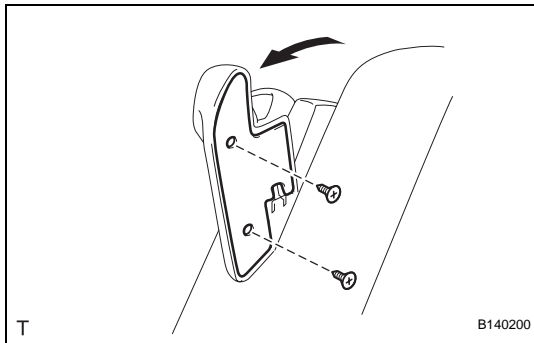

11. REMOVE REAR SEAT RECLINING RELEASE LEVER (w/ Rear No. 2 Seat)


- (a) Pull the reclining control lever to reveal the 2 screws. Then remove the 2 screw and cover.

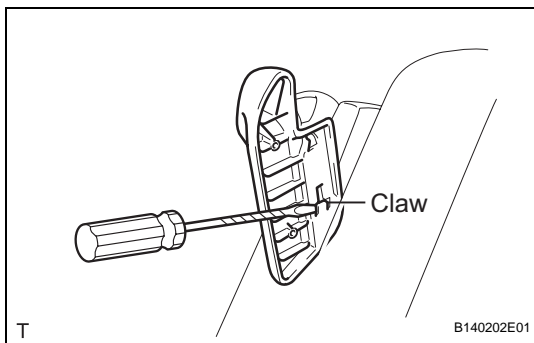

- (b) Using a screwdriver, detach the claw and remove the release lever.


HINT:

Tape the screwdriver tip before use.

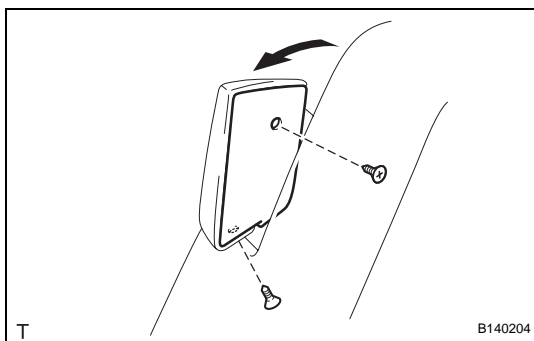

12. REMOVE REAR SEAT RECLINING CONTROL LEVER (w/ Rear No. 2 Seat)


- (a) Pull the reclining control lever to reveal the 2 screws. Then remove the 2 screw and cover.

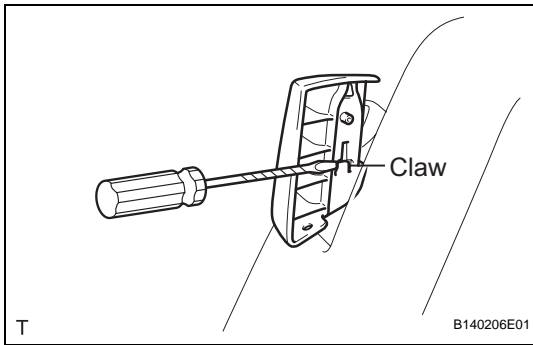

- (b) Using a screwdriver, detach the claw and remove the control lever.

HINT:

Tape the screwdriver tip before use.

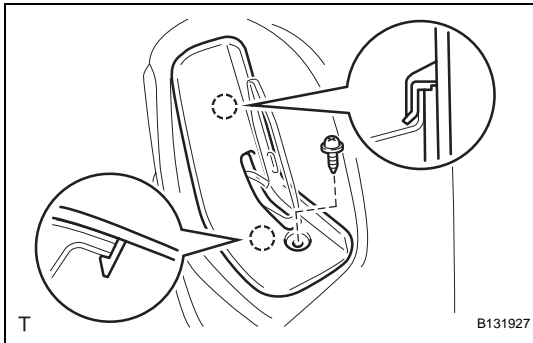


13. REMOVE REAR SEATBACK LOCK CONTROL LEVER BASE RH (w/o Rear No. 2 Seat)

- (a) Remove the screw.
(b) Using a screwdriver, detach the 2 claws and remove the lever base.

HINT:

Tape the screwdriver tip before use.

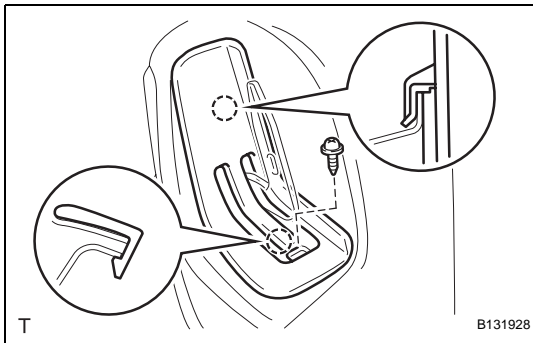


14. REMOVE REAR SEATBACK LOCK CONTROL LEVER BASE RH (w/ Rear No. 2 Seat)

- (a) Remove the screw.
(b) Using a screwdriver, detach the 2 claws and remove the lever base.


HINT:

Tape the screwdriver tip before use.

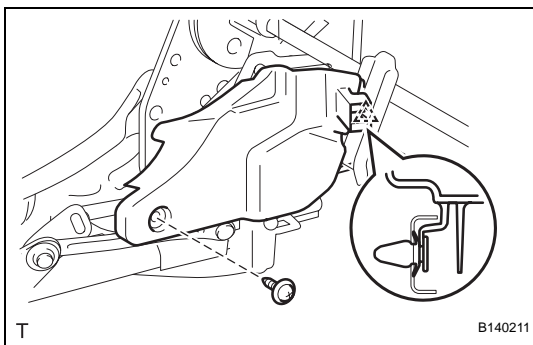

15. REMOVE REAR SEAT RECLINING INNER PROTECTOR RH (w/ Rear No. 2 Seat)


- (a) Remove the screw.
(b) Detach the clip and remove the inner protector.

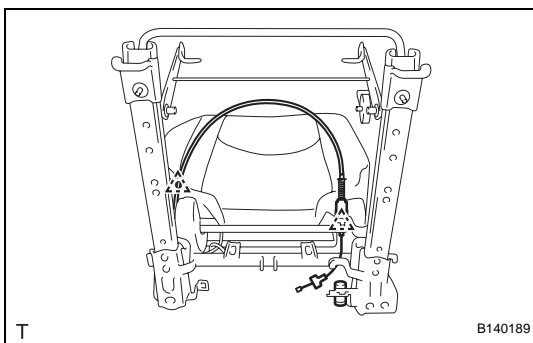


16. REMOVE REAR NO. 1 SEATBACK ASSEMBLY RH (w/o Rear No. 2 Seat)

- (a) Detach the 2 clamps and disconnect the cable from the reclining adjuster.

SE

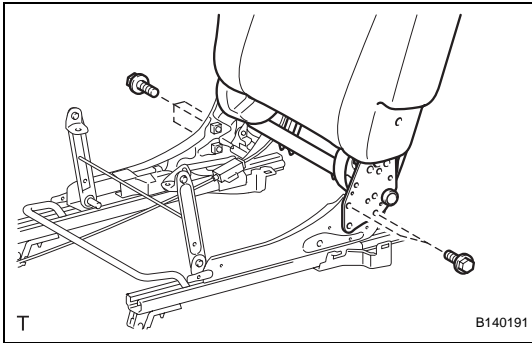


- (b) Remove the 5 bolts and the seatback.

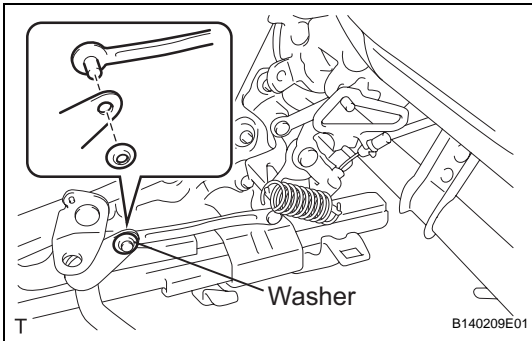


17. REMOVE REAR NO. 1 SEATBACK ASSEMBLY RH (w/ Rear No. 2 Seat)

- (a) Using a screwdriver, remove the washer and disconnect the W/I unit from the reclining adjuster.

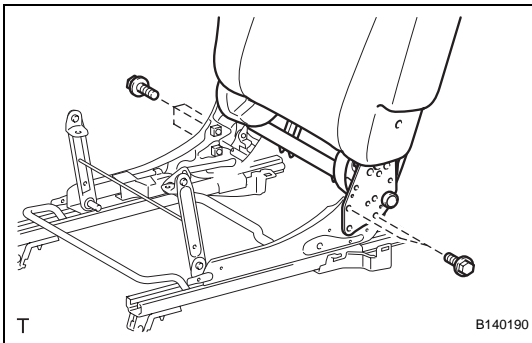

- (b) Remove the 5 bolts and the seatback.

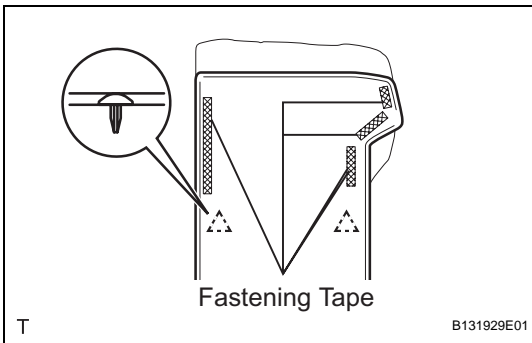


18. REMOVE REAR SEATBACK PROTECTOR


- (a) Using a clip remover, detach the 5 clips and open the fastening tape.

NOTICE:


If clips are damaged during removal, replace them.

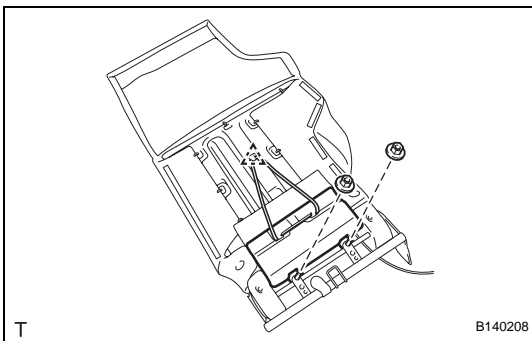

- (b) Detach the clip.
(c) Remove the 2 nuts and protector.

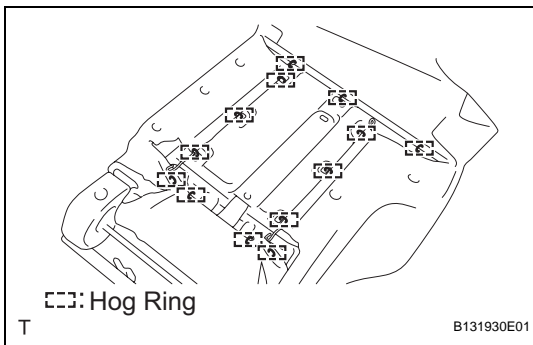
**19. REMOVE REAR NO. 1 SEATBACK COVER**

- (a) Remove the 13 hog rings.

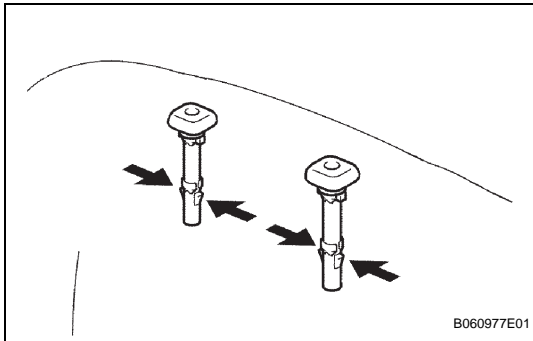


- (b) Detach the 4 claws and remove the 2 headrest supports.

- (c) Remove the seatback cover (with pad) from the seatback frame.

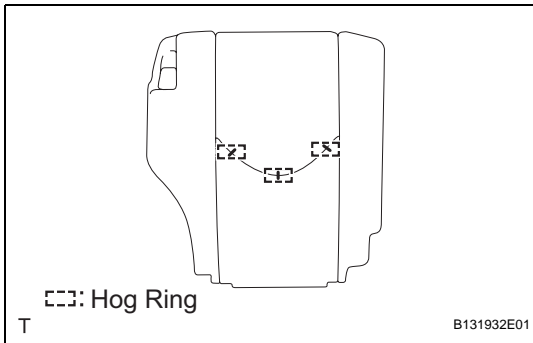


- (d) Remove the 3 hog rings and seatback cover from the seatback pad.

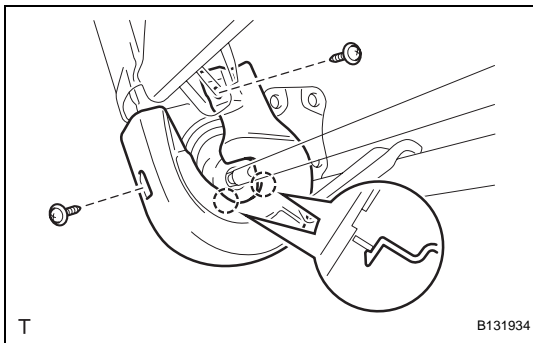**20. REMOVE REAR SEATBACK COVER RH**

- (a) Remove the 2 screws.
(b) Using a screwdriver, detach the 2 claws and remove the cover.

HINT:


Tape the screwdriver tip before use.

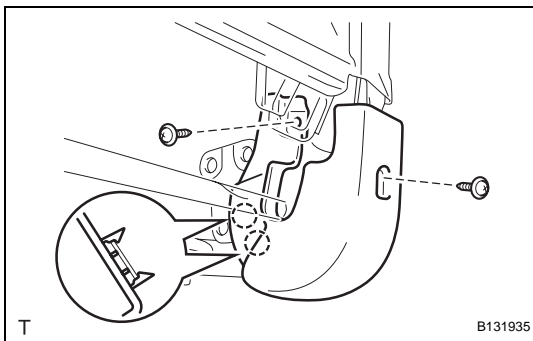**21. REMOVE REAR SEAT COVER (w/o Rear No. 2 Seat)**

- (a) Remove the 2 screws.
(b) Using a screwdriver, detach the 2 claws and remove the cover.

HINT:

Tape the screwdriver tip before use.

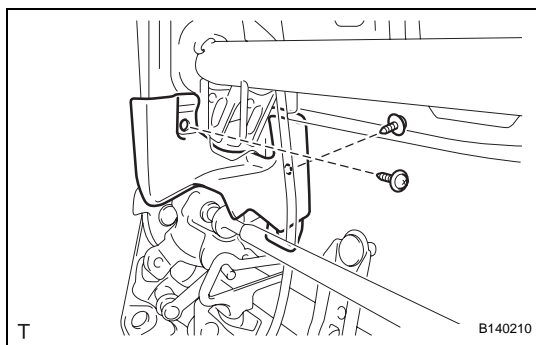**22. REMOVE REAR SEAT COVER (w/ Rear No. 2 Seat)**

- (a) Remove the 2 screws and cover.


REASSEMBLY

CAUTION:


Wear protective gloves. Sharp areas on the seatback frame, seat cushion frame and reclining adjuster may injure your hands.

HINT:


A bolt without a torque specification is shown in the standard bolt chart (see page [SS-2](#)).

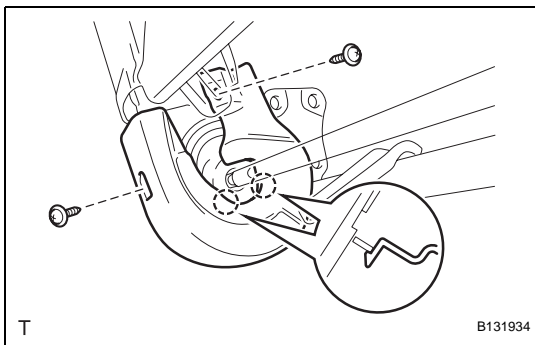**1. INSTALL REAR SEATBACK COVER RH**

- (a) Attach the 2 claws to install the cover.
- (b) Install the 2 screws.

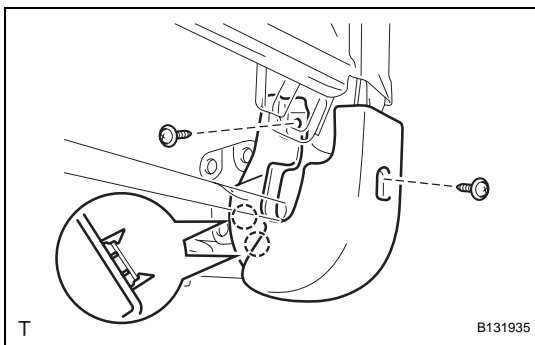**2. INSTALL REAR SEAT COVER (w/o Rear No. 2 Seat)**

- (a) Attach the 2 claws to install the cover.
- (b) Install the 2 screws.

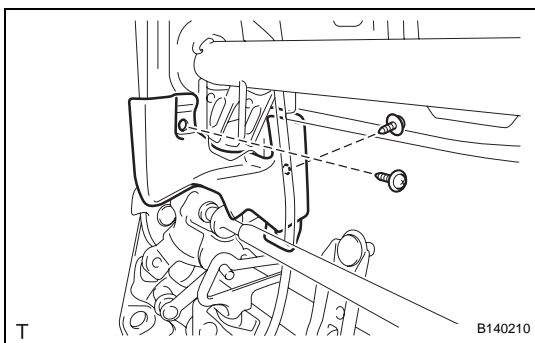
**3. INSTALL REAR SEAT COVER (w/ Rear No. 2 Seat)**

- (a) Install the cover with the 2 screws.


4. INSTALL REAR NO. 1 SEATBACK COVER**NOTICE:**

- Be careful not to damage the cover.
- When installing the hog rings, avoid wrinkling the cover.


SE

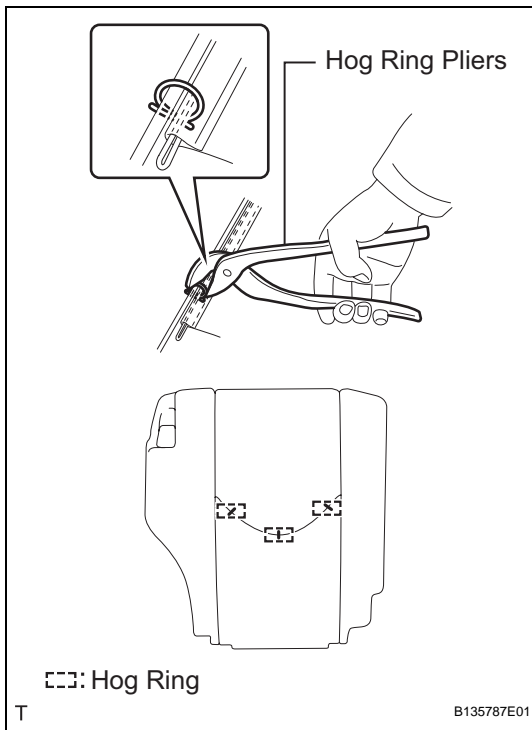


- (a) Using hog ring pliers, install the seatback cover to the seatback pad with 3 new hog rings.
- (b) Install the seatback cover (with pad) to the seatback frame.

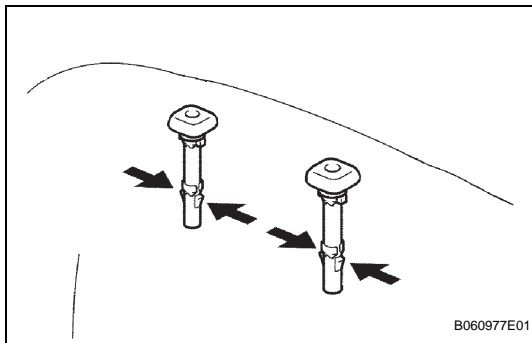

- (c) Attach the 4 claws to install the 2 headrest supports.

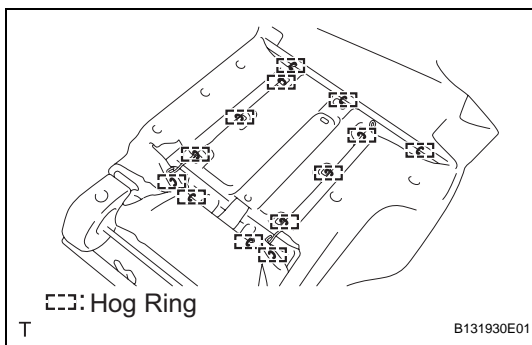


- (d) Lift up the seatback cover and install the 13 hog rings.

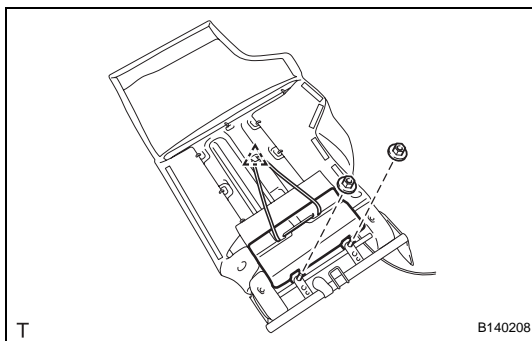


5. INSTALL REAR SEATBACK PROTECTOR

- (a) Install the protector with the 2 nuts.
Torque: 20 N*m (204 kgf*cm, 15 ft.*lbf)
- (b) Attach the clip.

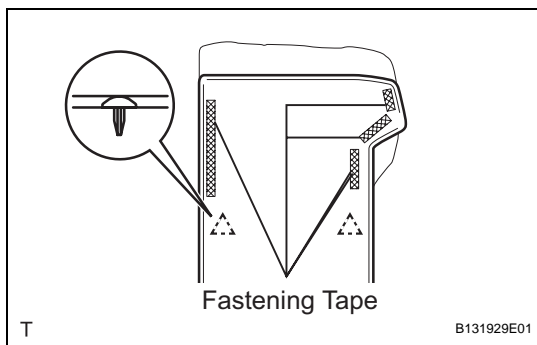


(c) Attach the 2 clips and close the fastening tape.

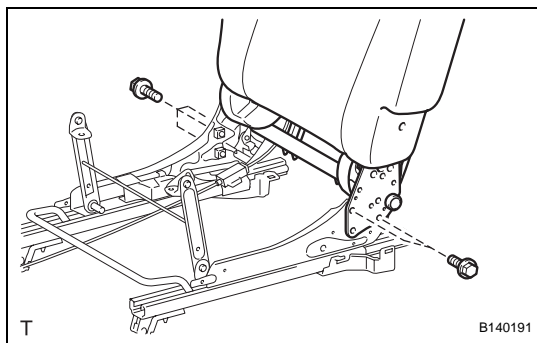


6. INSTALL REAR NO. 1 SEATBACK ASSEMBLY RH (w/ o Rear No. 2 Seat)

- (a) Install the seatback with the 5 bolts.
Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)

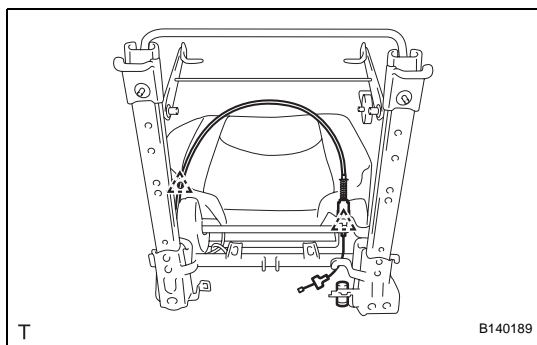


- (b) Attach the 2 clamps and connect the cable to the reclining adjuster.

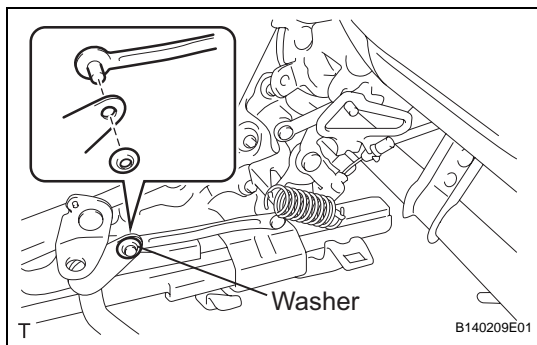


7. INSTALL REAR NO. 1 SEATBACK ASSEMBLY RH (w/ Rear No. 2 Seat)

- (a) Connect the W/I unit to the reclining adjuster with the washer.

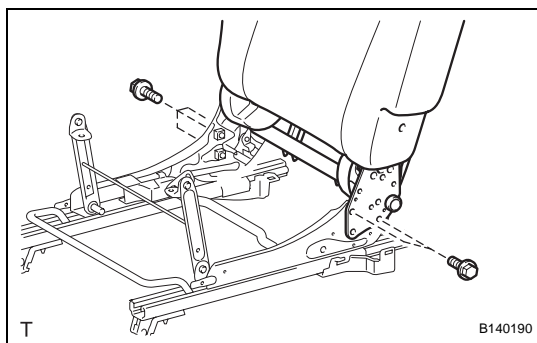


- (b) Install the seatback with the 5 bolts.
Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)

SE

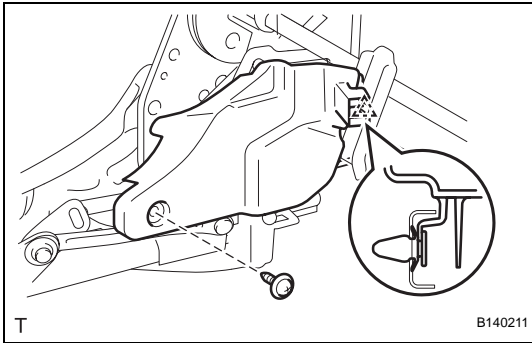


8. INSTALL REAR SEAT RECLINING INNER PROTECTOR RH (w/ Rear No. 2 Seat)

- (a) Attach the clip to install the inner protector.
- (b) Install the screw.

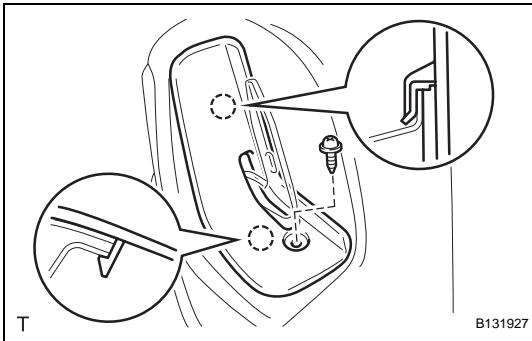


9. INSTALL REAR SEATBACK LOCK CONTROL LEVER BASE RH (w/o Rear No. 2 Seat)

- (a) Attach the 2 claws to install the lever base.
- (b) Install the screw.

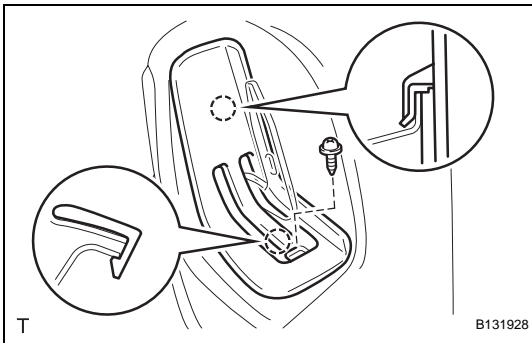

10. INSTALL REAR SEATBACK LOCK CONTROL LEVER BASE RH (w/ Rear No. 2 Seat)


- (a) Attach the 2 claws to install the lever base.
- (b) Install the screw.

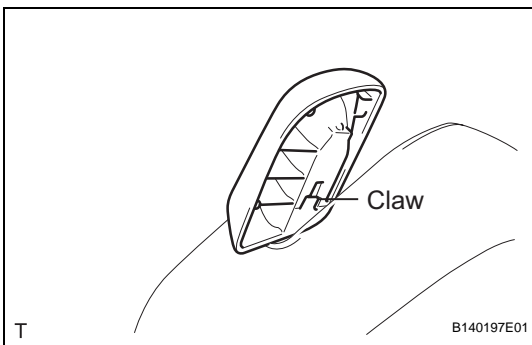


11. INSTALL REAR SEAT RECLINING RELEASE LEVER (w/o Rear No. 2 Seat)


- (a) Attach the claw to install the release lever.

- (b) Install the cover with the 2 screws.

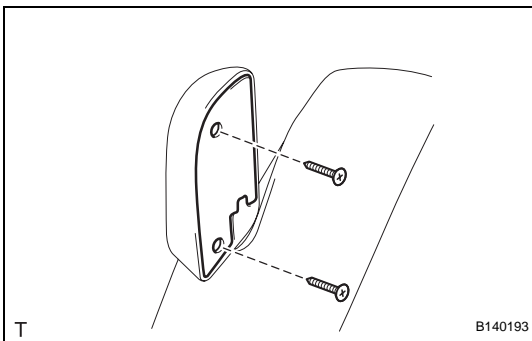


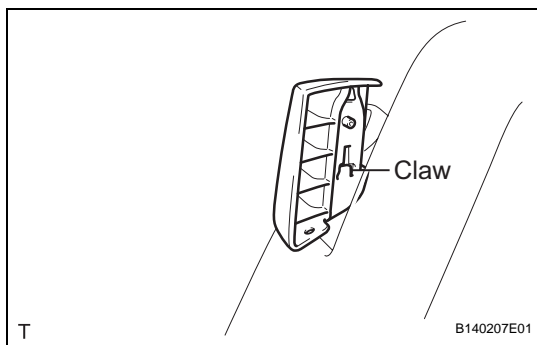**12. INSTALL REAR SEAT RECLINING CONTROL LEVER (w/ Rear No. 2 Seat)**


(a) Attach the claw to install the control lever.

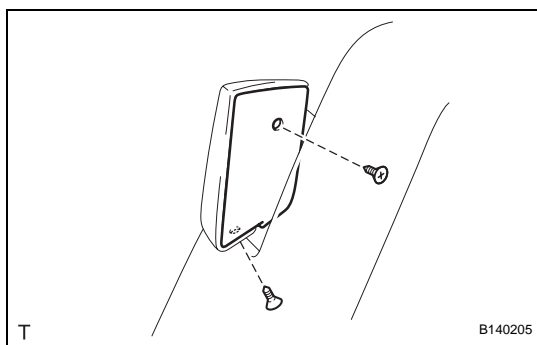


(b) Install the cover with the 2 screws.

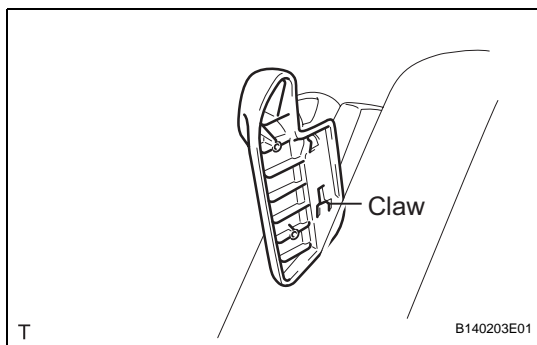**13. INSTALL REAR SEAT RECLINING RELEASE LEVER (w/ Rear No. 2 Seat)**

(a) Attach the claw to install the release lever.

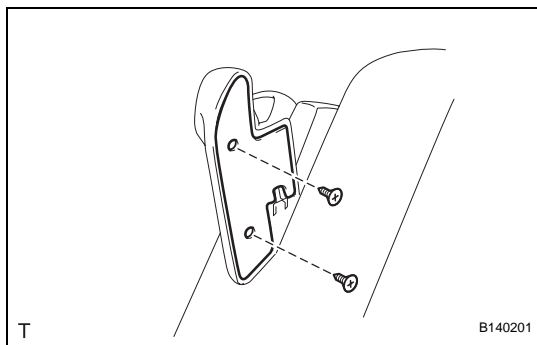

(b) Install the cover with the 2 screws.

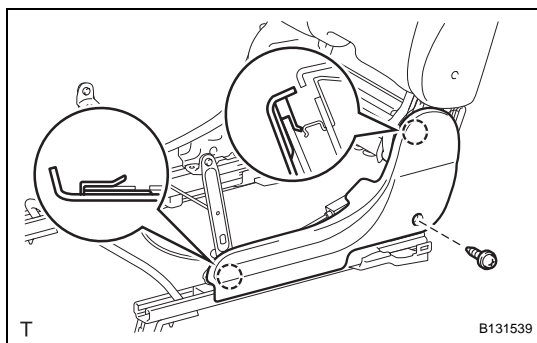
**14. INSTALL REAR SEAT CUSHION REAR MOULDING RH**

(a) Attach the 2 claws to install the moulding.

(b) Install the screw.

15. INSTALL REAR SEAT CUSHION MOULDING RH
HINT:

Use the same procedures described for the rear seat cushion rear moulding RH.

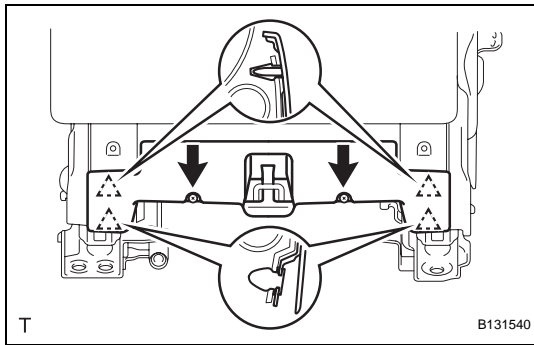
**16. INSTALL REAR SEAT REAR BRACKET COVER RH**

- (a) Open the lower part of the seatback cover. Then attach the 4 clips to install the bracket cover.
- (b) Install the 2 screws.


17. INSTALL REAR NO. 1 SEAT CUSHION COVER**NOTICE:**

- Be careful not to damage the cover.
- When installing the hog rings, avoid wrinkling the cover.


- (a) Using hog ring pliers, install the seat cushion cover to the seat cushion pad with 3 new hog rings.

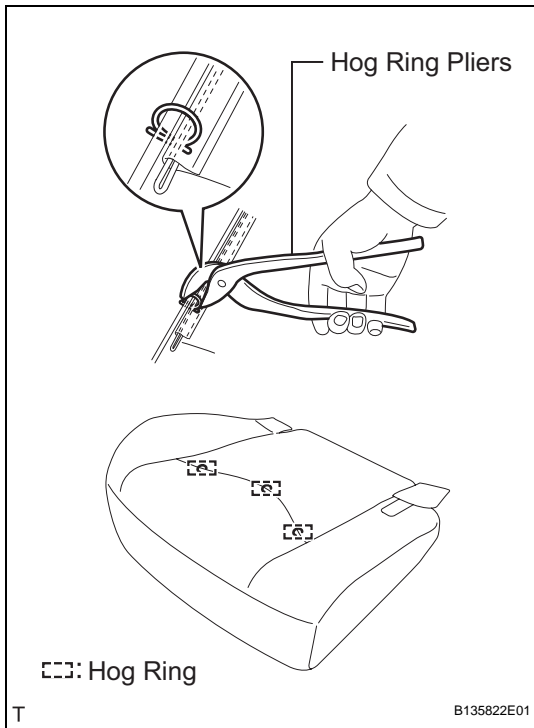


- (b) Using hog ring pliers, install the seat cushion cover (with pad) to the seat cushion frame with 18 new hog rings.

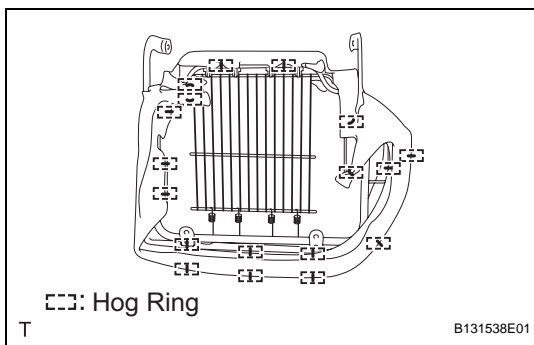


- (c) Attach the 2 hooks.

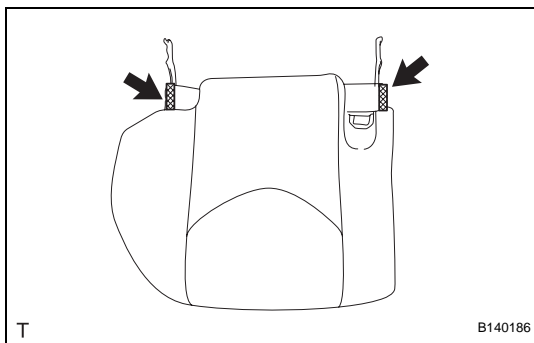


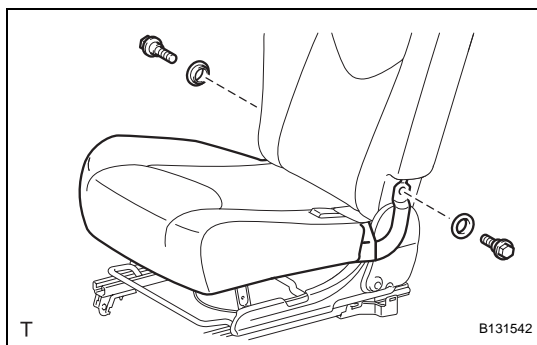**18. INSTALL REAR NO. 1 SEAT CUSHION ASSEMBLY RH**

- (a) Install the cushion with the 2 bushes and 2 bolts.
Torque: 21 N*m (214 kgf*cm, 15 ft.*lbf)

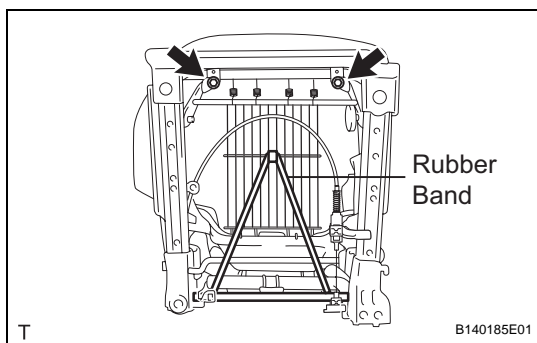

- (b) Install the 2 bolts.
Torque: 21 N*m (214 kgf*cm, 15 ft.*lbf)
(c) Connect the rubber band of the seatback cover to the seat cushion frame.

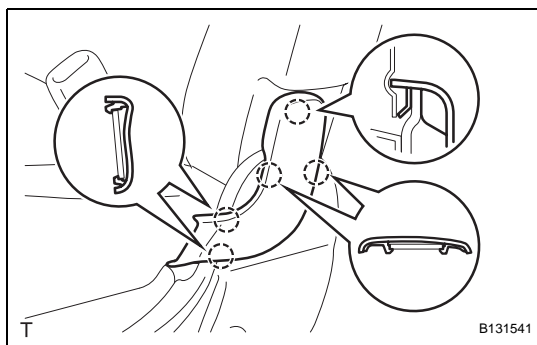19. INSTALL REAR SEAT INNER BELT ASSEMBLY RH (See page [SB-41](#))**20. INSTALL REAR NO. 2 SEAT CUSHION HINGE COVER**

- (a) Attach the 5 claws to install the hinge cover.

21. INSTALL REAR NO. 1 SEAT CUSHION HINGE COVER
HINT:

Use the same procedures described for the rear No. 2 seat cushion hinge cover.

22. INSTALL REAR SEAT HEADREST ASSEMBLY

INSTALLATION

1. INSTALL REAR NO. 1 SEAT ASSEMBLY RH (w/o Rear No. 2 Seat)

- (a) Fully tilt the seatback forward.
- (b) Place the seat in the cabin.

NOTICE:




Be careful not to damage the vehicle body.

- (c) Connection procedures of seat to lock cable when reusing seat:

- (1) Using a screwdriver, detach the claw and remove the connector case from the seat.


HINT:

Tape the screwdriver tip before use.

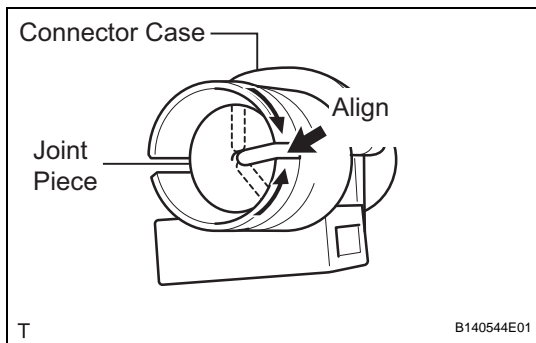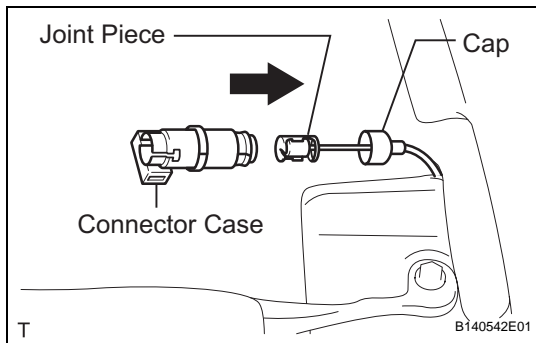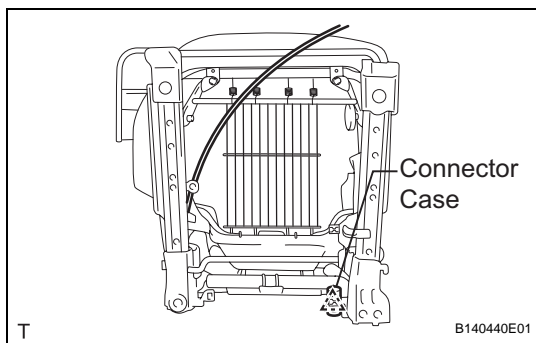SE

- (2) Install the connector case to the body's cap.


- (3) Pull out the joint piece. Align the slits of the joint piece and connector case.

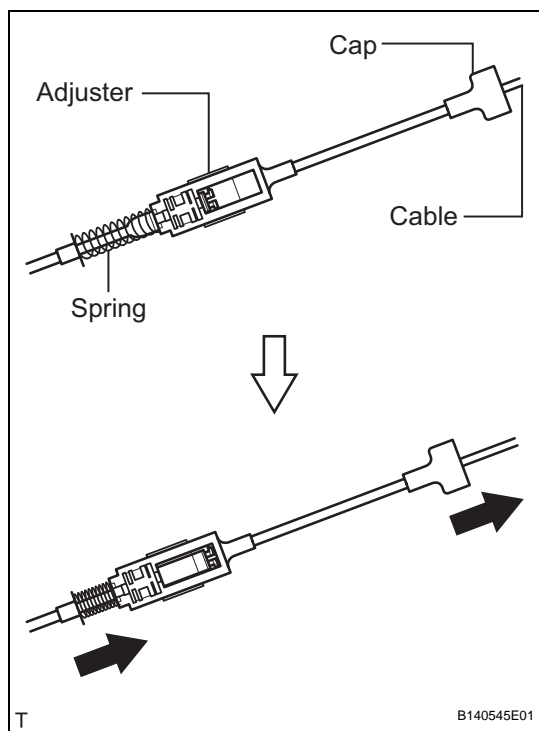

- (4) Compress the spring of the adjuster, and pull out the cable from the seat's cap.

HINT:


Perform this procedure with the lock of the adjuster released.

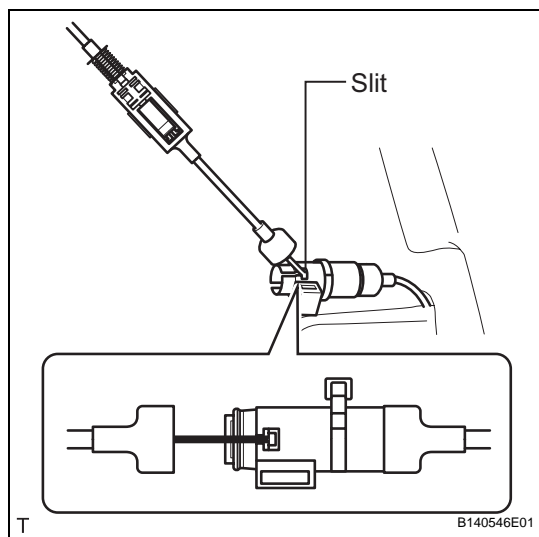


- (5) Install the seat cable's end part to the connector case's slit.

HINT:


Position the joint piece cable's end part as shown in the illustration.

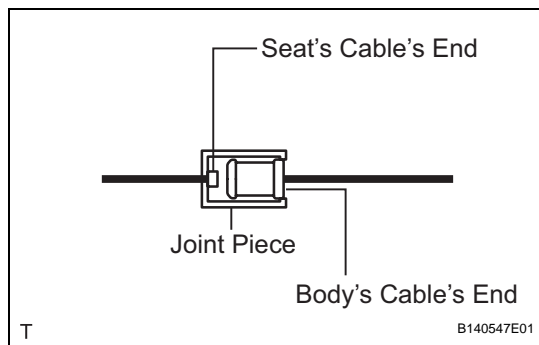


SE

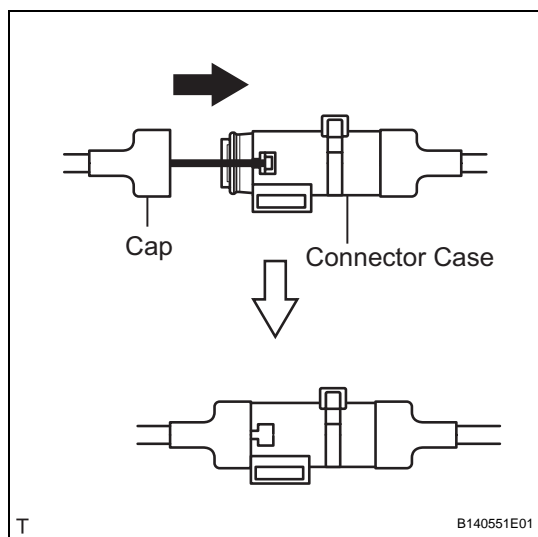


- (6) Install the seat's cap to the connector case.
- (7) Temporarily place the seat into the vehicle where it will be installed.

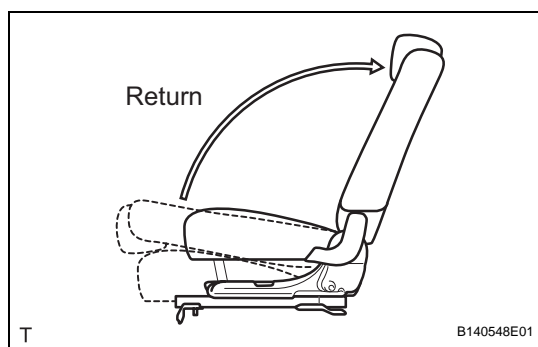

- (8) Return the seatback to the upright position.

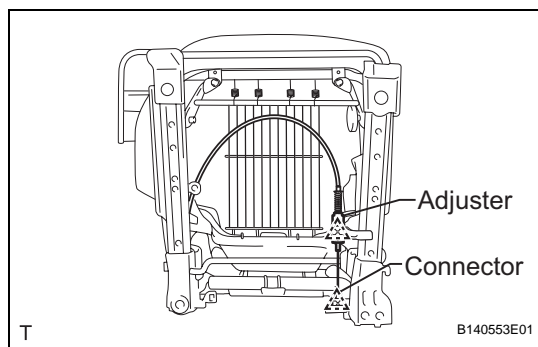


- (9) Attach the claws of the connector and adjuster, and install them to the seat.

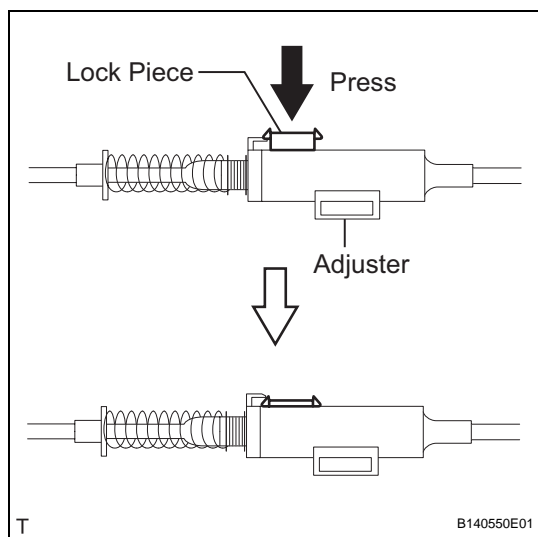

- (10) Press the adjuster's lock piece to lock it.

NOTICE:

When pressing the lock piece, make sure the adjuster's spring is not compress.

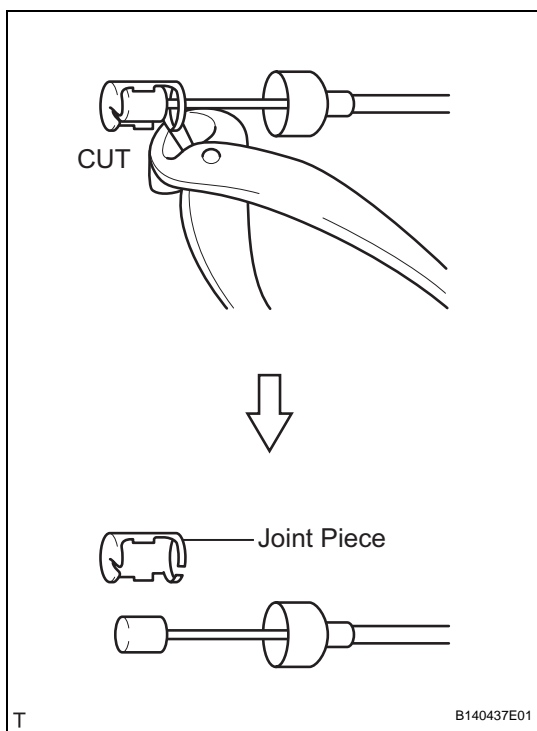

(d) Connection procedures of seat to lock cable when replacing seat:


- (1) Cut the joint piece on the lock cable, and remove it.

HINT:


- A joint piece is included with new seats.
- This procedure is not necessary when the lock cable is replaced with a new one.

- (2) Temporarily place the seat into the vehicle where it will be installed.

SE

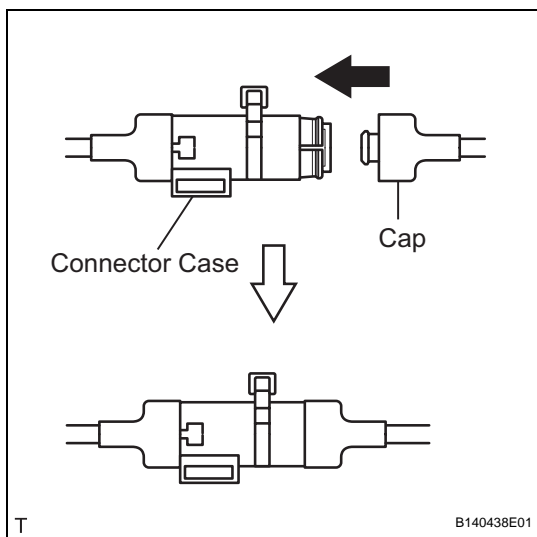


- (3) Install the body's cap to the connector case.

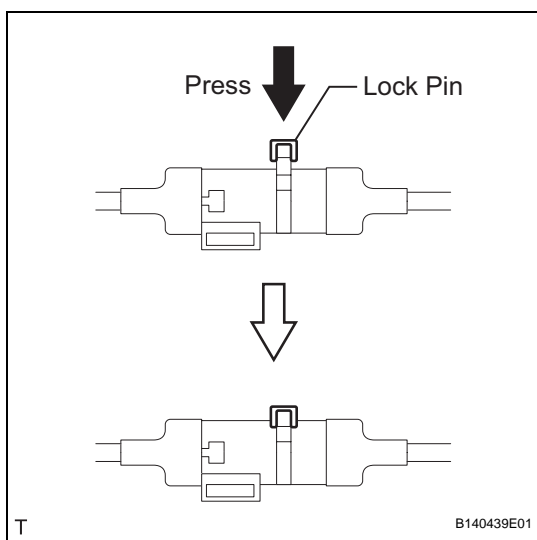


- (4) Press the adjuster's lock pin.

SE

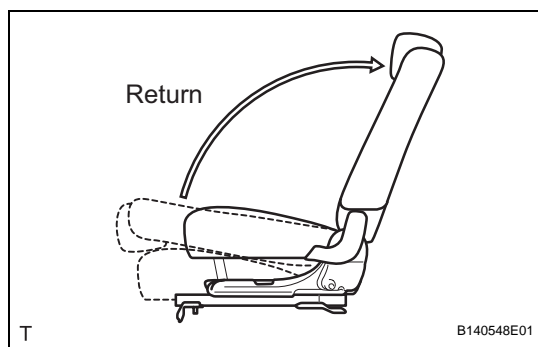

- (5) Return the seatback to the upright position.

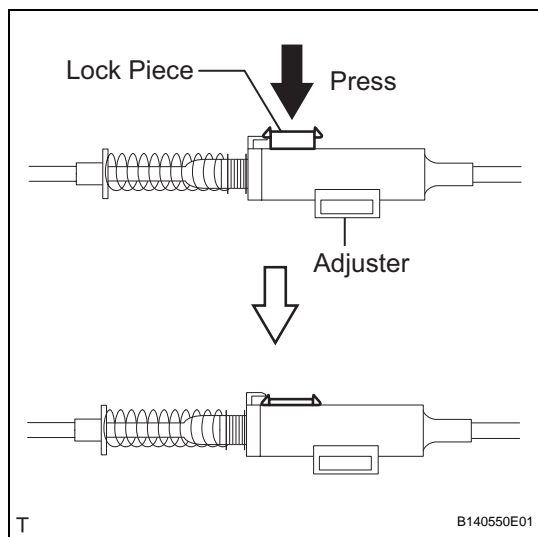


- (6) Press the adjuster's lock piece to lock it.

NOTICE:

When pressing the lock piece, make sure the adjuster's spring is not compressed.

- (e) Lift up the seat track adjusting handle and move the seat to the foremost position.

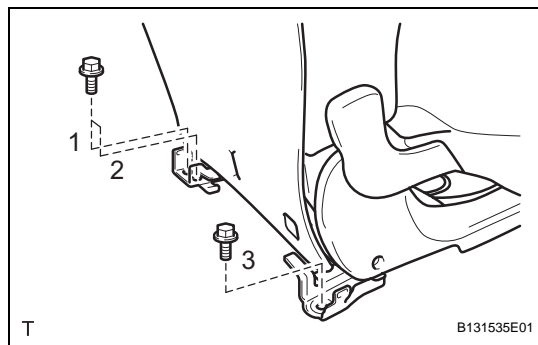


- (f) Tighten the 2 bolts on the rear side of the seat.

Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)

HINT:

Tighten the bolts in the order indicated in the illustration.

- (g) Lift up the seat track adjusting handle and move the seat to the rearmost position.

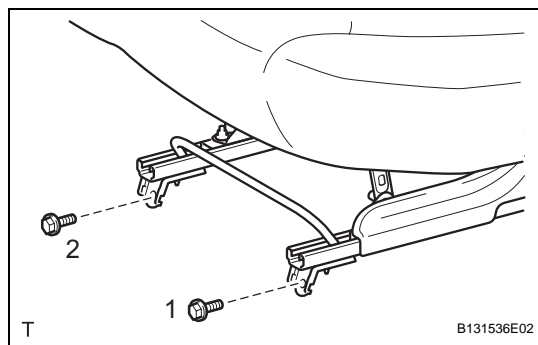

- (h) Tighten the 2 bolts on the front side of the seat.

Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)

HINT:

Tighten the bolts in the order indicated in the illustration.


2. INSTALL REAR NO. 1 SEAT ASSEMBLY RH (w/ Rear No. 2 Seat)

- (a) Fully tilt the seatback forward.


- (b) Place the seat in the cabin.

NOTICE:


Be careful not to damage the vehicle body.

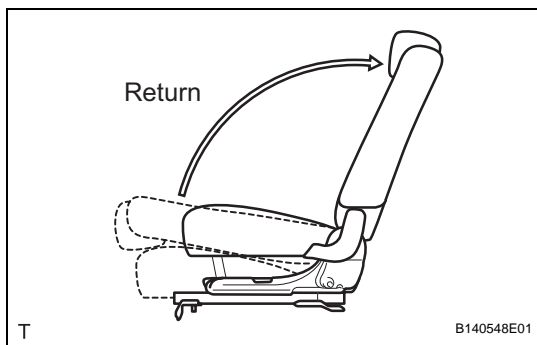

- (c) Return the seatback to the upright position.
- (d) Lift up the seat track adjusting handle and move the seat to the foremost position.

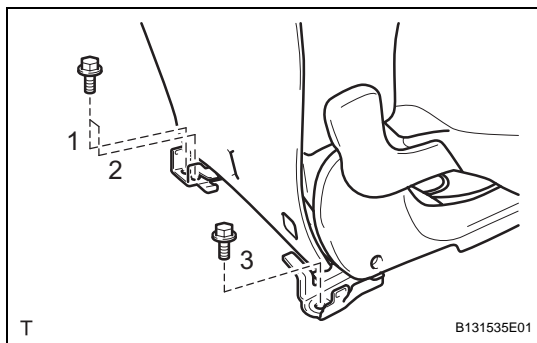


- (e) Tighten the 2 bolts on the rear side of the seat.
Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)
HINT:
Tighten the bolts in the order indicated in the illustration.
- (f) Lift up the seat track adjusting handle and move the seat to the rearmost position.

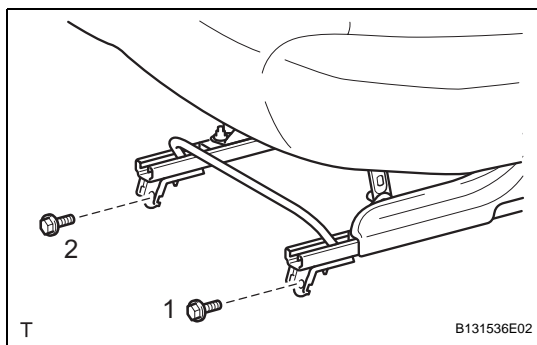

- (g) Tighten the 2 bolts on the front side of the seat.
Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)
HINT:
Tighten the bolts in the order indicated in the illustration.

3. INSTALL REAR NO. 1 SEAT LOCK CABLE ASSEMBLY (w/o Rear No. 2 Seat)

- (a) Attach the clamps and install the cable to the vehicle body.

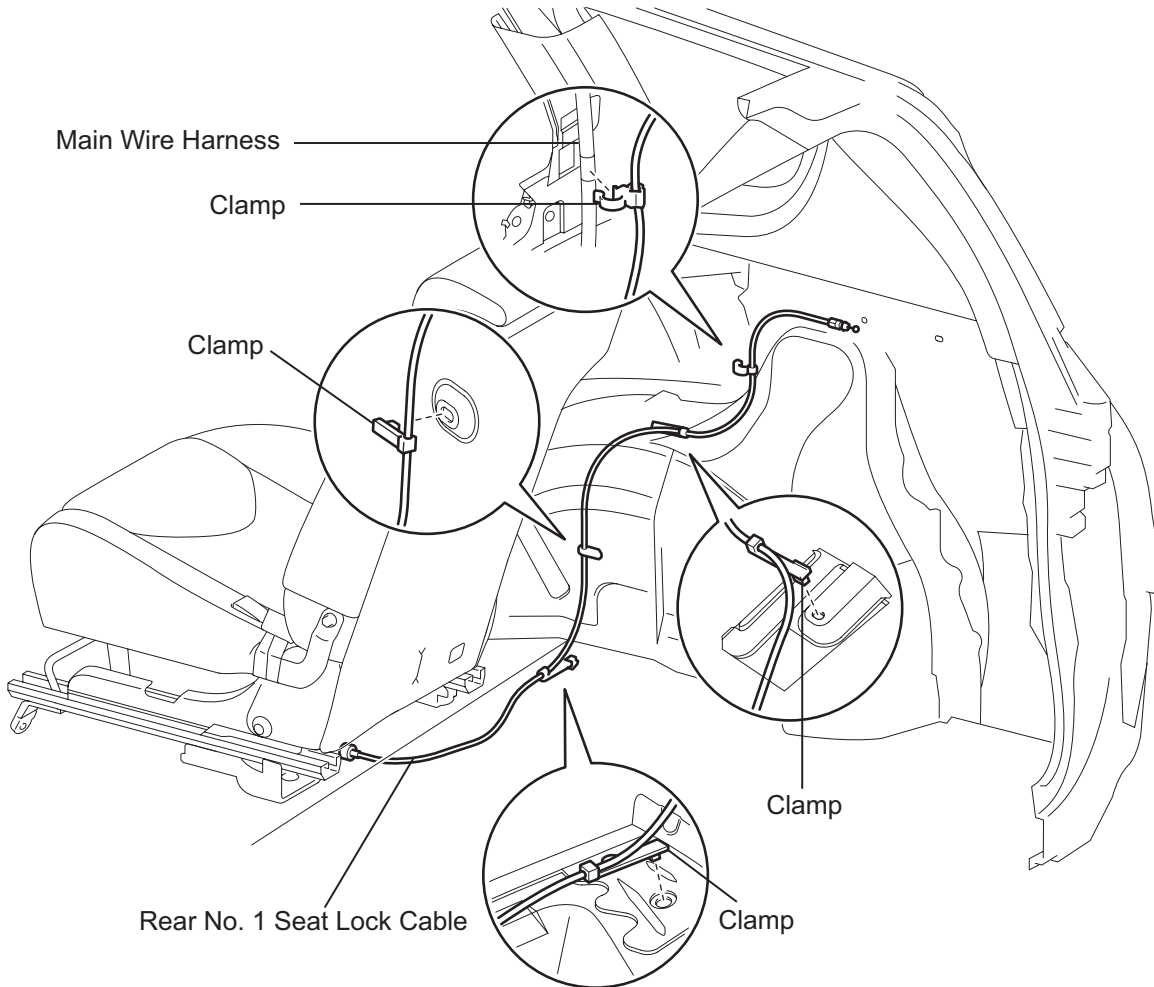


T

B132540E01


4. INSTALL REAR SEAT LEG COVER

- (a) Attach the 8 claws to install the 2 leg covers.

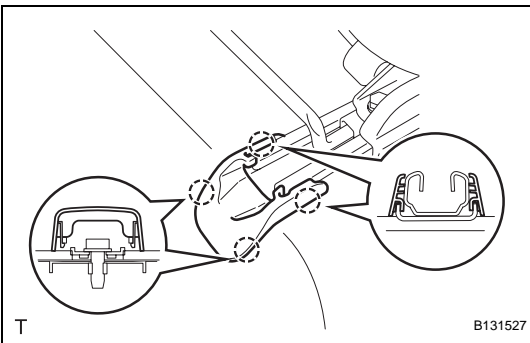


T

B131527

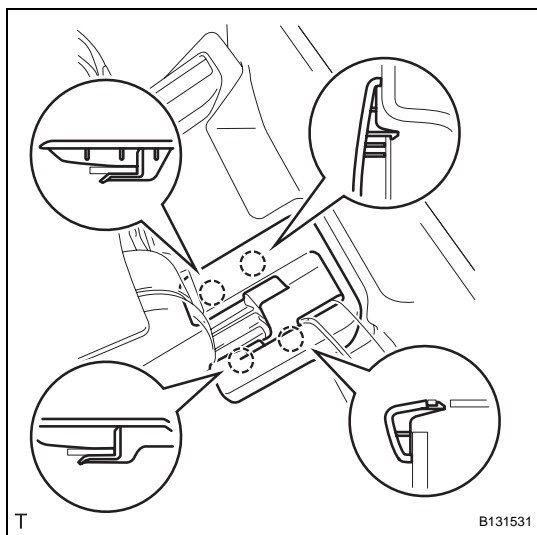


5. INSTALL REAR NO. 3 SEAT LEG SIDE COVER (w/ Rear No. 2 Seat)

- (a) Attach the 4 claws to install the rear No. 3 seat leg side cover.

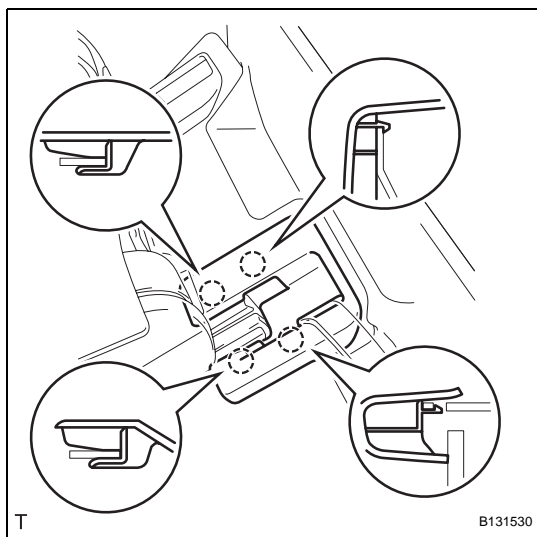

6. INSTALL REAR NO. 3 SEAT LEG SIDE COVER (w/o Rear No. 2 Seat)

- (a) Attach the 4 claws to install the No. 3 rear seat leg side cover.

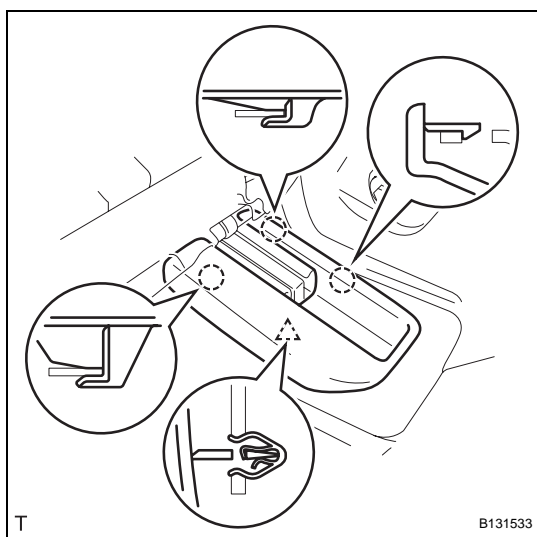


7. INSTALL REAR NO. 2 SEAT LEG SIDE COVER

- (a) Attach the 3 claws and clip to install the rear No. 2 seat leg side cover.

8. INSTALL RECLINING REMOTE CONTROL LEVER SUB-ASSEMBLY RH (w/o Rear No. 2 Seat)

- (a) Connect the rear No. 1 seat lock cable to the lever.

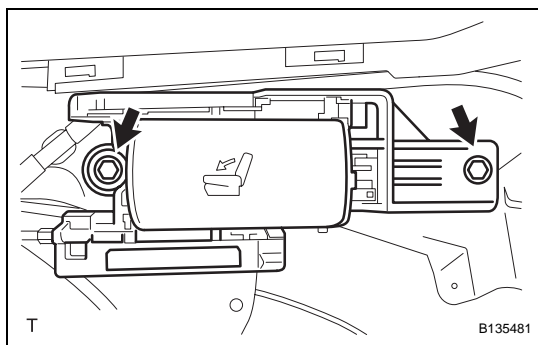


(b) Install the lever with the 2 bolts.

Torque: 18 N*m (184 kgf*cm, 13 ft.*lbf)

9. INSTALL DECK TRIM SIDE PANEL ASSEMBLY RH (w/o Rear No. 2 Seat) (See page [IR-53](#))

10. INSTALL TETHER ANCHOR BRACKET SUB-ASSEMBLY (w/o Rear No. 2 Seat) (See page [IR-54](#))

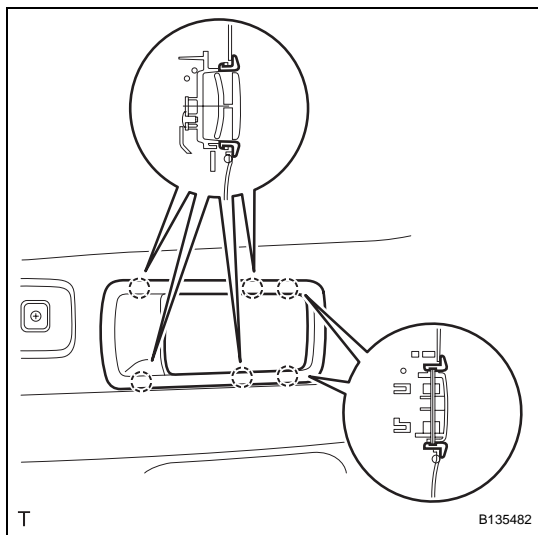

11. INSTALL RECLINING REMOTE CONTROL LEVER BEZEL RH (w/o Rear No. 2 Seat)

(a) Attach the 6 claws to install the bezel.

12. INSTALL REAR FLOOR FINISH PLATE (w/o Rear No. 2 Seat) (See page [IR-55](#))

13. INSTALL BACK DOOR WEATHERSTRIP (w/o Rear No. 2 Seat)

14. INSTALL REAR FLOOR NO. 1 MAT SUPPORT SIDE PLATE (w/o Rear No. 2 Seat) (See page [IR-55](#))

15. INSTALL REAR FLOOR NO. 3 BOARD (w/o Rear No. 2 Seat)

16. INSTALL REAR FLOOR NO. 2 BOARD (w/o Rear No. 2 Seat)

17. INSTALL DECK BOARD ASSEMBLY (w/o Rear No. 2 Seat)

18. INSTALL REAR FLOOR NO. 1 BOARD (w/o Rear No. 2 Seat)

19. INSTALL TONNEAU COVER ASSEMBLY (w/o Rear No. 2 Seat)

20. INSTALL PACKAGE TRAY TRIM POCKET SUB-ASSEMBLY (w/o Rear No. 2 Seat)